



***AXIOMTEK***

## **CAPA311/312**

**Intel® Atom® x5-E3940 and Intel®  
Pentium® Processor N4200 and  
Celeron® Processor N3350  
3.5" Board**

**User's Manual**



## **Disclaimers**

This manual has been carefully checked and believed to contain accurate information. Axiomtek Co., Ltd. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

Axiomtek does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. Axiomtek does not make any commitment to update the information in this manual.

Axiomtek reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Axiomtek Co., Ltd.

## **CAUTION**

If you replace wrong batteries, it causes the danger of explosion. It is recommended by the manufacturer that you follow the manufacturer's instructions to only replace the same or equivalent type of battery, and dispose of used ones.

**©Copyright 2020 Axiomtek Co., Ltd.**

**All Rights Reserved**

**February 2020, Version A3**

**Printed in Taiwan**

## **ESD Precautions**

Computer boards have integrated circuits sensitive to static electricity. To prevent chipsets from electrostatic discharge damage, please take care of the following jobs with precautions:

- Do not remove boards or integrated circuits from their anti-static packaging until you are ready to install them.
- Before holding the board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. It discharges static electricity from your body.
- Wear a wrist-grounding strap, available from most electronic component stores, when handling boards and components.

## **Trademarks Acknowledgments**

Axiomtek is a trademark of Axiomtek Co., Ltd.

Intel<sup>®</sup> and Celeron<sup>®</sup> are trademarks of Intel Corporation.

Windows<sup>®</sup> is a trademark of Microsoft Corporation.

AMI is a trademark of American Megatrend Inc.

IBM, PC/AT, PS/2, VGA are trademarks of International Business Machines Corporation.

Other brand names and trademarks are the properties and registered brands of their respective owners.

# Table of Contents

---

Disclaimers.....	ii
ESD Precautions.....	iii
<b>Chapter 1 Introduction.....</b>	<b>1</b>
1.1 Features.....	2
1.2 Specifications.....	2
1.3 Utilities Supported.....	3
<b>Chapter 2 Board and Pin Assignments.....</b>	<b>5</b>
2.1 Board Dimensions and Fixing Holes.....	5
2.2 Board Layout.....	7
2.3 Jumper and Switch Settings.....	9
2.3.1 Restore BIOS Optimal Defaults (JP3).....	10
2.3.2 COM3 Data/Power Selection (JP4).....	10
2.3.3 LVDS and eDP +3.3V/+5V/+12V Voltage Selection (JP5).....	10
2.3.4 Auto Power On (SSW1).....	10
2.4 Connectors.....	11
2.4.1 SMBus Connector (CN1).....	12
2.4.2 Front Panel Connector (CN2).....	12
2.4.3 COM3 and COM4 Wafer Connectors (CN3 and CN4).....	13
2.4.4 Audio Connector (CN5).....	13
2.4.5 Digital I/O Connector (CN6).....	13
2.4.6 USB 2.0 Wafer Connector (CN7).....	14
2.4.7 I2C Connector (CN11).....	14
2.4.8 SATA Power Connector (CN12).....	14
2.4.9 Fan Connector (CN13).....	14
2.4.10 Inverter Connector (CN14).....	15
2.4.11 SATA Connector (CN15).....	15
2.4.12 LVDS Connector (CN16).....	16
2.4.13 COM1 and COM2 Wafer Connector (CN17 and CN18).....	18
2.4.14 HDMI Connector (CN19).....	18
2.4.15 USB 3.0 Ports (CN20 and CN21).....	19
2.4.16 COM1 D-Sub Connector (CN22).....	19
2.4.17 VGA Connector (CN23) (Optional).....	20
2.4.18 ATX Power Connector (ATX1).....	20
2.4.19 Ethernet Ports (LAN1 and LAN2).....	21
2.4.20 Full-size PCI-Express Mini Card Connector (SCN1).....	22
2.4.21 SIM Card Socket (SCN2).....	23
2.4.22 Full-size PCI-Express Mini Card or mSATA Connector (SCN3).....	23

2.4.23	eDP Connector (SCN4) (Optional).....	24
--------	--------------------------------------	----

**Chapter 3 Hardware Description ..... 25**

3.1	Microprocessors .....	25
3.2	BIOS .....	25
3.3	System Memory.....	25
3.4	I/O Port Address Map.....	26
3.5	Interrupt Controller (IRQ) Map .....	27
3.6	Memory Map .....	34

**Chapter 4 AMI BIOS Setup Utility ..... 35**

4.1	Starting.....	35
4.2	Navigation Keys .....	35
4.3	Main Menu.....	37
4.4	Advanced Menu.....	38
4.5	Chipset Menu.....	55
4.6	Security Menu.....	59
4.7	Boot Menu.....	60
4.8	Save & Exit Menu .....	65

**Appendix A Watchdog Timer..... 67**


A.1	About Watchdog Timer .....	67
A.2	How to Use Watchdog Timer .....	67

**Appendix B Digital I/O ..... 69**


B.1	About Digital I/O .....	69
B.2	Digital I/O Programming .....	69

**This page is intentionally left blank.**


# Chapter 1 Introduction

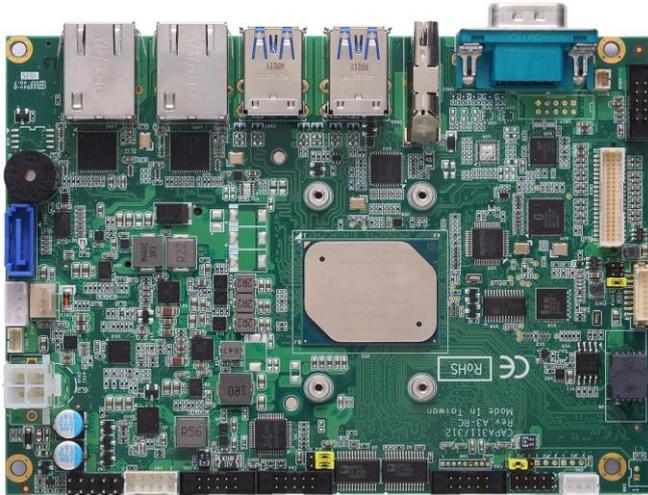

CAPA311

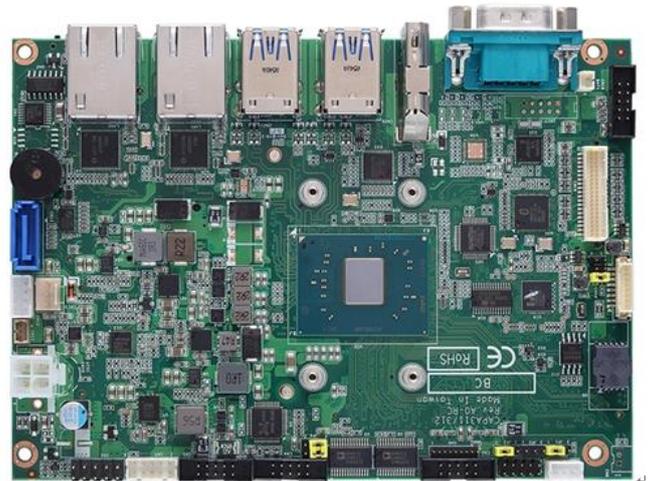

CAPA312

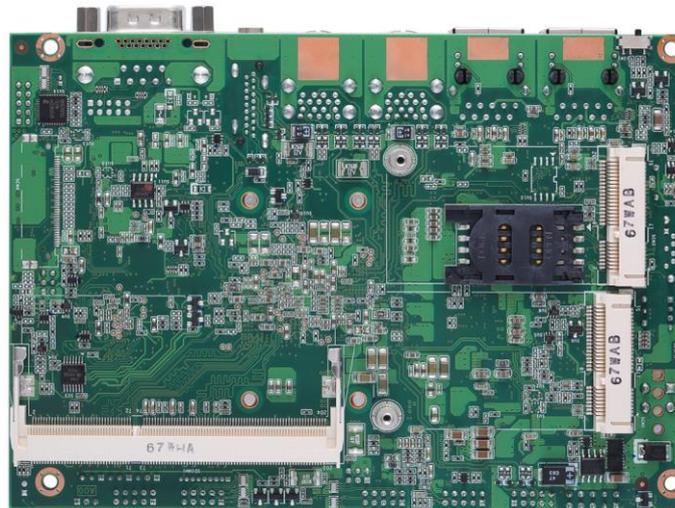

the CAPA311 is a 3.5" embedded board with Intel® Atom® x5-E3940 and the CAPA312 is with Intel® Pentium® N4200/ Celeron® N3350 processor that deliver outstanding system performance through high-bandwidth interfaces, multiple I/O functions for interactive applications and various embedded computing solutions.

Both of them have one 204-pin unbuffered SO-DIMM socket for single channel DDR3L 1867MHz memory with maximum memory capacity up to 8GB. There are two Gigabit/Fast Ethernet ports, one SATA port with transfer rate up to 6Gb/s, four USB 3.0 ports, two USB 2.0 ports and built-in HD audio codec that can achieve the best stability and reliability for industrial applications. Additionally, it provides you with unique embedded features, such as four serial ports (two RS-232/422/485 and two RS-232) and 3.5" form factor that applies an extensive array of PC peripherals.

## 1.1 Features

- CAPA311 - Intel® Atom® quad core x5-E3940 processor (1.6GHz)
- CAPA312 - Intel® Pentium® quad core N4200 processor (1.1GHz) and Celeron® dual core N3350 processor (1.1GHz)
- 1 DDR3L SO-DIMM supports up to 8GB memory capacity
- 4 USB 3.0 ports and 2 USB 2.0 ports
- 2 PCI-Express Mini Cards

## 1.2 Specifications

- **CPU**
  - CAPA311
    - Intel® ATOM® quad core x5-E3940 1.6GHz.
  - CAPA312
    - Intel® Pentium® quad core N4200 1.1GHz.
    - Intel® Celeron® dual core N3350 1.1GHz.
- **Thermal Solution**
  - Passive.
- **Operating Temperature**
  - CAPA311: -40°C~+80°C
  - CAPA312: -20°C~+70°C.
- **BIOS**
  - American Megatrends Inc. UEFI (Unified Extensible Firmware Interface) BIOS.
  - 64Mbit SPI Flash, DMI, Plug and Play.
  - PXE Ethernet Boot ROM.
- **System Memory**
  - One 204-pin unbuffered DDR3L SO-DIMM socket.
  - Maximum up to 8GB DDR3L 1600MHz memory capacity.
- **Onboard Multi I/O**
  - Serial Ports: Two RS-232/422/485 and two RS-232.
- **Serial ATA**
  - One SATA-600 connector.
  - mSATA supported.
- **USB Interface**
  - Four USB 3.0 ports on the rear I/O.
  - Two USB 2.0 ports in 2x5-pin internal wafer connector.
- **Display**
  - One 2x20-pin connector for 18/24-bit single/dual channel LVDS and one 8-pin inverter connector. LVDS resolution is up to 1920x1200 in 24-bit dual channels.
  - One HDMI. The resolution is up to 3840x2160.
  - (Optional) One 15-pin D-Sub as VGA connector. The resolution is up to 1920x1200.
  - (Optional) One eDP. The resolution is up to 3840x2160.

- **Watchdog Timer**
  - Timeout value range is 1~65535 seconds.
- **Ethernet**
  - Two RJ-45 LAN ports: Intel® i211AT supports 1000/100/10Mbps Gigabit/Fast Ethernet with Wake-on-LAN and PXE Boot ROM.
- **Audio**
  - HD audio compliant with Realtek ALC662.
  - Line-out and line-in/MIC-in via internal box header.
- **Expansion Interface**
  - One full-size PCI-Express Mini Card socket complies with PCI-Express Mini Card Spec. V1.2.
  - One full-size PCI-Express Mini Card (with mSATA supported) complies with PCI-Express Mini Card Spec. V1.2.
- **Power Input**
  - One 2x2-pin connector.
  - +12V DC-in only.
  - Auto power on function supported.
- **Power Management**
  - ACPI (Advanced Configuration and Power Interface).
- **Form Factor**
  - 3.5" form factor.



Note

*All specifications and images are subject to change without notice.*

## 1.3 Utilities Supported


- Chipset and graphics driver
- Ethernet driver
- Audio driver
- Trusted Execution Engine

**This page is intentionally left blank.**


# Chapter 2

## Board and Pin Assignments


### 2.1 Board Dimensions and Fixing Holes

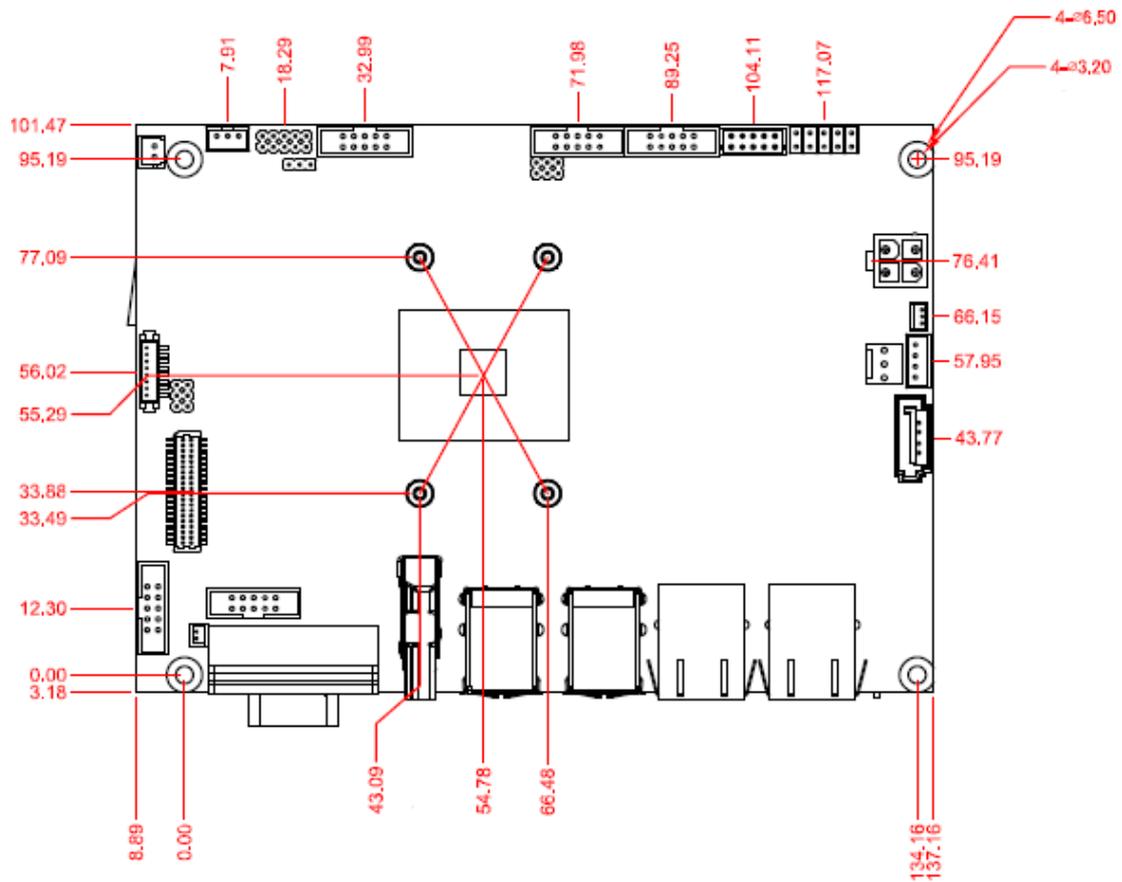

Top View

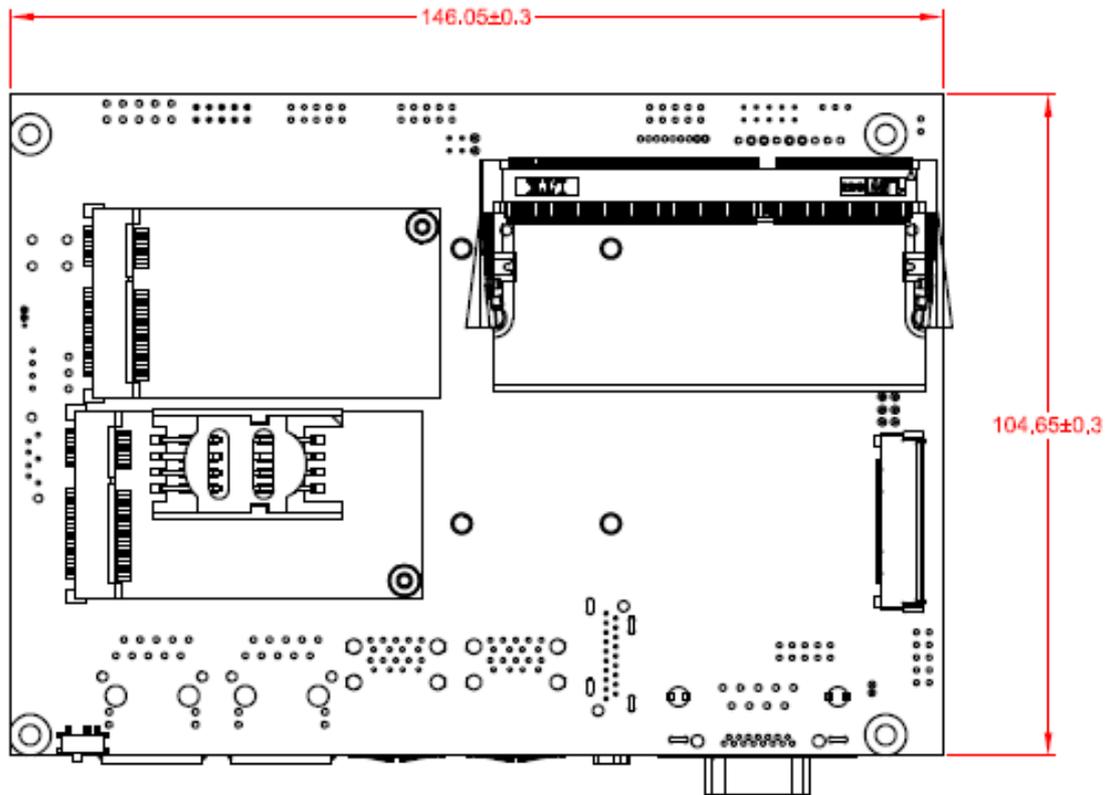


Bottom View

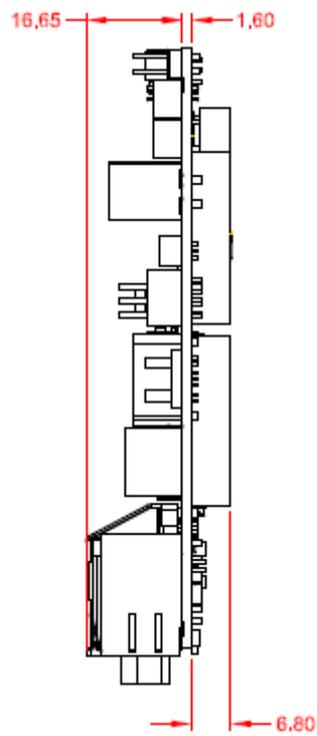


Side View


## 2.2 Board Layout

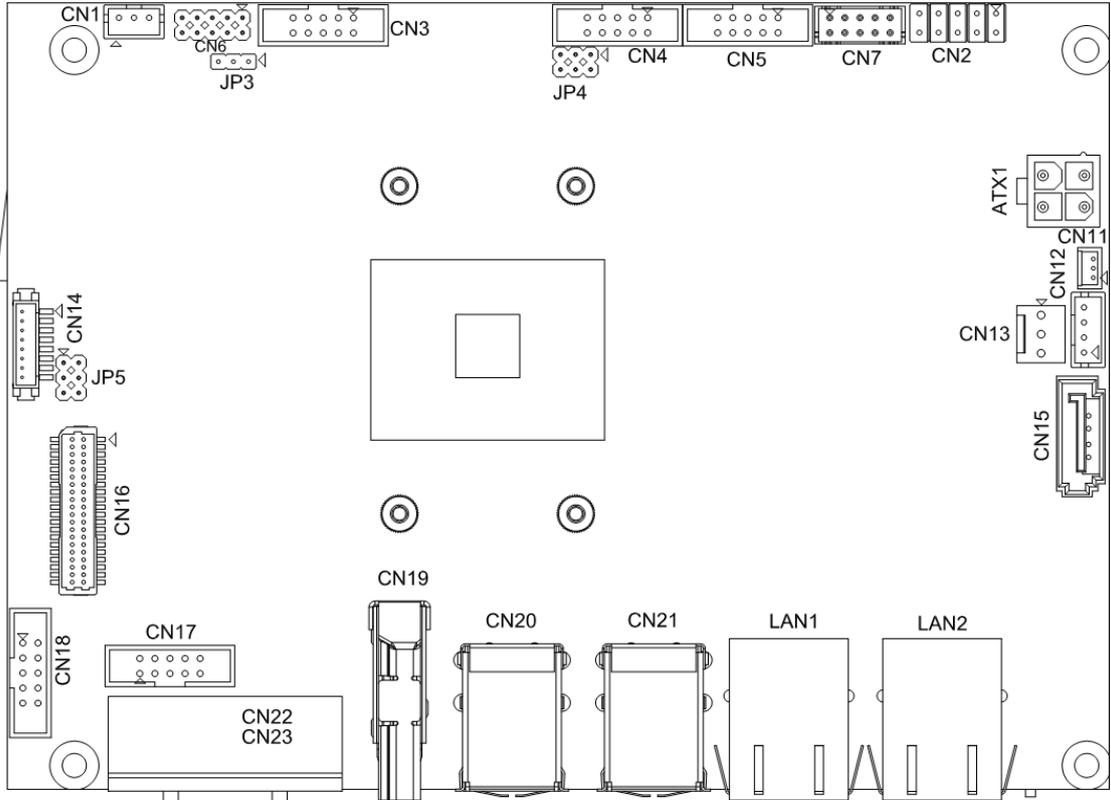

Top View

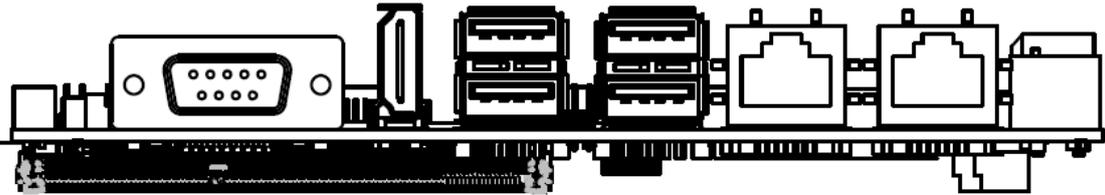


Side View

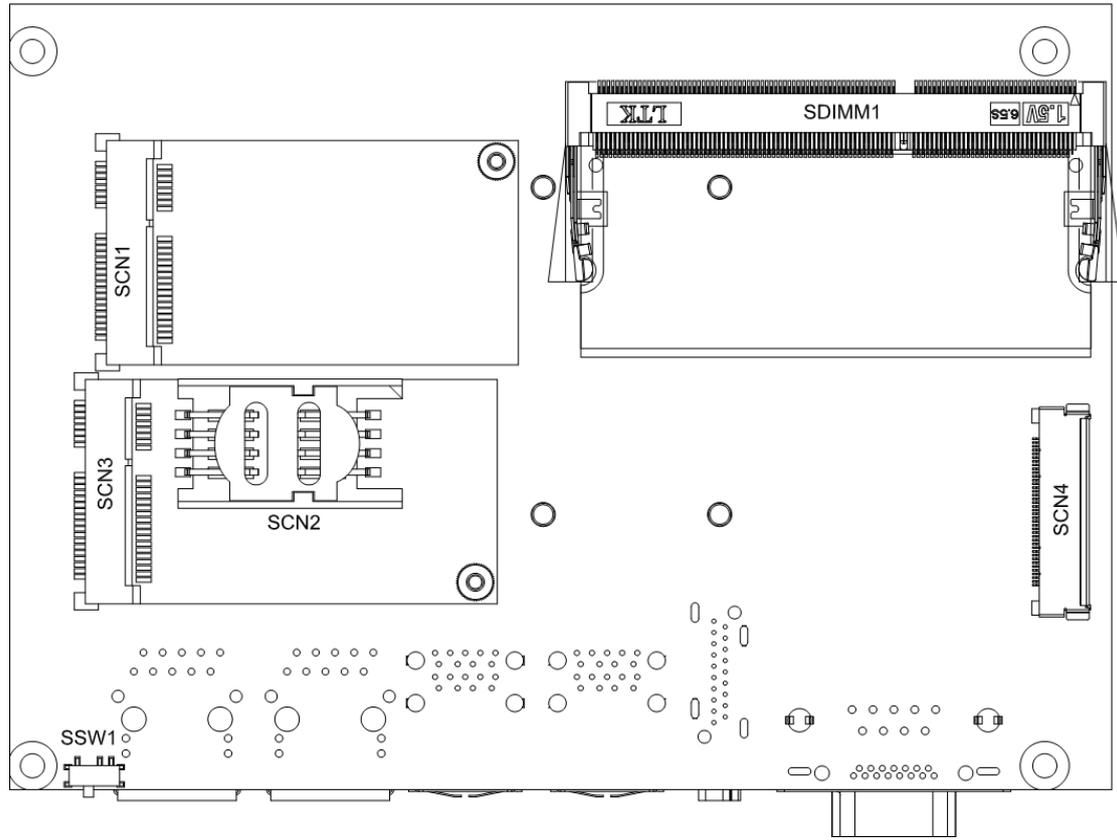

**Bottom View**

## 2.3 Jumper and Switch Settings

Jumper is a small component consisting of jumper clip and jumper pins. Install jumper clip on 2 jumper pins to close. And remove jumper clip from 2 jumper pins to open. Below illustration shows how to set up jumper.

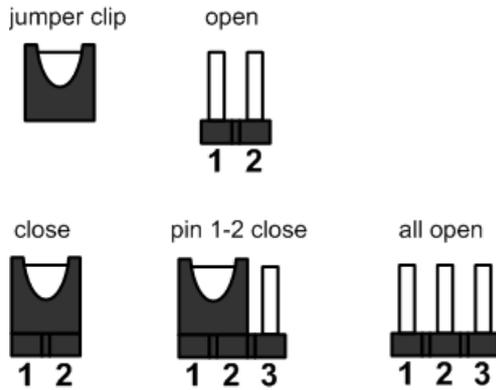

Properly configure jumper and switch settings on the CAPA312 to meet your application purpose. Below you can find a summary table of jumpers, switch and onboard default settings.



Note

**Once the default jumper or switch setting needs to be changed, please do it under power-off condition.**

Jumper and Switch	Description	Setting
JP3	Restore BIOS Optimal Defaults Default: Normal Operation	1-2 Close
JP4	COM3 Data/Power Selection	CN4 Pin 1: DCD 3-5 Close
	Default: RS-232 Data	CN4 Pin 8: RI 4-6 Close
JP5	LVDS and eDP +3.3V/+5V/+12V Voltage Selection Default: +3.3V	1-2 Close
SSW1	Auto Power On Default: Disable	1-2 Close

### 2.3.1 Restore BIOS Optimal Defaults (JP3)

This is a 1x3-pin (pitch=2.0mm) jumper. Put jumper clip to pin 2-3 for a few seconds then move it back to pin 1-2. Doing this procedure can restore BIOS optimal defaults.


Function	Setting
Normal (Default)	1-2 close
Restore BIOS optimal defaults	2-3 close



### 2.3.2 COM3 Data/Power Selection (JP4)

This is a 2x3-pin (pitch=2.0mm) jumper. The COM3 port has +5V level power capability on DCD and +12V level on RI by setting jumper JP4.


Function	Setting
Power: Set CN4 pin 1 to +5V level	1-3 close
Data: Set CN4 pin 1 to DCD (Default)	3-5 close
Power: Set CN4 pin 8 to +12V level	2-4 close
Data: Set CN4 pin 8 to RI (Default)	4-6 close

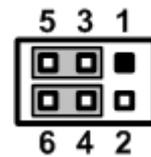

### 2.3.3 LVDS and eDP +3.3V/+5V/+12V Voltage Selection (JP5)

This is a 2x3-pin (pitch=2.0mm) jumper. The board supports voltage selection for flat panel displays. Use these jumpers to set CN16 pin 1~6 and SCN4 pin 1~4 to +3.3V, +5V or +12V. To prevent hardware damage, before connecting please make sure that the input voltage of flat panel is correct.


Function	Setting
+3.3V level (Default)	1-2 close
+5V level	2-4 close
+12V level	5-6 close

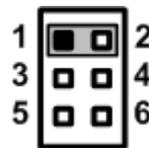

### 2.3.4 Auto Power On (SSW1)

If SSW1 is enabled for power input, the system will be automatically power on without pressing soft power button. If SSW1 is disabled for power input, it is necessary to manually press soft power button to power on the system.

 Function	Setting
Disable auto power on (Default)	1-2 close
Enable auto power on	2-3 close

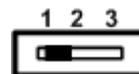

## 2.4 Connectors

 
 
Signals go to other parts of the system through connectors. Loose or improper connection might cause problems, please make sure all connectors are properly and firmly connected. Here is a summary table of connectors on the hardware.

Connector	Description
CN1	SMBus Connector
CN2	Front Panel Connector
CN3	COM4 Wafer Connector
CN4	COM3 Wafer Connector
CN5	Audio Connector
CN6	Digital I/O Connector
CN7	USB 2.0 Wafer Port 4 and 5
CN11	I2C Connector
CN12	SATA Power Connector
CN13	Fan Connector
CN14	Inverter Connector
CN15	SATA Connector
CN16	LVDS Connector
CN17 (Optional)	COM1 Wafer Connector
CN18	COM2 Wafer Connector
CN19	HDMI Connector
CN20	USB 3.0 Port 0 and 1
CN21	USB 3.0 Port 2 and 3
CN22	COM1 D-Sub Connector
CN23 (Optional)	VGA Connector
ATX1	ATX Power Connector
LAN1~LAN2	Ethernet Port 1 and 2
SCN1	Full-size PCI-Express Mini Card Connector
SCN2	SIM Card Socket
SCN3	Full-size PCI-Express Mini Card or mSATA Connector
SCN4 (Optional)	eDP Connector
SDIMM1	DDR3L SO-DIMM Connector

### 2.4.1 SMBus Connector (CN1)

This connector is a 3-pin (pitch=2.0mm) wafer connector, which is compliant with JST B3B-PH-K-S, for SMBus interface. The SMBus (System Management Bus) is a simple bus for the purpose of lightweight communication.


Pin	Signal
1	SMBus clock
2	SMBus data
3	GND

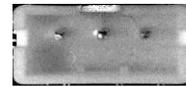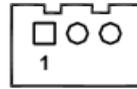

### 2.4.2 Front Panel Connector (CN2)

This is a 2x5-pin header (pitch=2.0mm) for front panel interface.

Pin	Signal	Pin	Signal
1	PWR-	2	PWR+
3	PWRLED-	4	PWRLED+
5	PWRSW-	6	PWRSW+
7	HW RST-	8	HW RST+
9	HDDLED-	10	HDDLED+

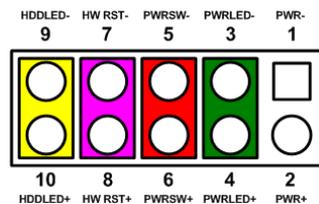

#### Power Status

Pin 1 and pin 2 are for power status button; letting user know the power status of this board.

#### Power LED

Pin 4 connects anode (+) of LED and pin 3 connects cathode(-) of LED. The power LED lights up when the system is powered on.

#### Power On/Off Button

Pin 5 and 6 connect the power button on front panel to CPU board, which allows users to turn on or off power supply.

#### System Reset Switch

Pin 7 and 8 connect the case-mounted reset switch that reboots your computer without turning off the power switch. It is a better way to reboot your system for a longer life of system power supply.


#### HDD Activity LED

This connection is linked to hard drive activity LED on the control panel. LED flashes when HDD is being accessed. Pin 9 and 10 connect the hard disk drive to the front panel HDD LED, pin 9 is assigned as cathode(-) and pin 10 is assigned as anode(+).

### 2.4.3 COM3 and COM4 Wafer Connectors (CN3 and CN4)

The CN3 and CN4 are 2x5-pin connectors for COM4 and COM3 interface, respectively. Only COM3 is equipped with +5V level power capability on DCD and +12V level on RI by setting JP4 (see section 2.3.2).


Pin	Signal	Pin	Signal
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	No use

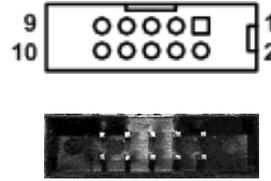

### 2.4.4 Audio Connector (CN5)

This is a 2x5-pin connector for audio interface.


Pin	Signal	Pin	Signal
1	MIC_IN	2	GND
3	LINE_IN_L	4	GND
5	LINE_IN_R	6	GND
7	AUDIO_OUT_L	8	GND
9	AUDIO_OUT_R	10	GND

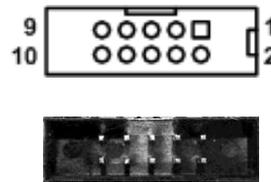

### 2.4.5 Digital I/O Connector (CN6)

This is a 2x5-pin (pitch=2mm) connector. The board is equipped with an 8-channel (4 inputs and 4 outputs) digital I/O that meets requirements for a system customary automation control. The digital I/O can be configured to control cash drawers and sense warning signals from an Uninterrupted Power System (UPS), or perform store security control. You may use software programming to control these digital signals, please refer to Appendix B.



Pin	Signal	Pin	Signal
1	Digital Input 1	2	Digital Output 8
3	Digital Input 2	4	Digital Output 7
5	Digital Input 3	6	Digital Output 6
7	Digital Input 4	8	Digital Output 5
9	+5V	10	GND

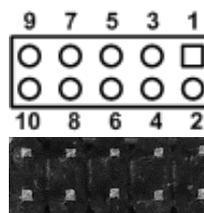

### 2.4.6 USB 2.0 Wafer Connector (CN7)

This is a 2x5-pin (pitch=2mm) wafer, which is compliant with Hirose DF11-xdp-2dsa, and a Universal Serial Bus (USB) connector for installing versatile USB 2.0 compliant interface peripherals.

  Pin	Signal	Pin	Signal
1	USB VCC (+5V_SBY)	2	USB VCC (+5V_SBY)
3	USB #4_D-	4	USB #5_D-
5	USB #4_D+	6	USB #5_D+
7	GND	8	GND
9	GND	10	GND

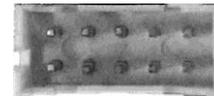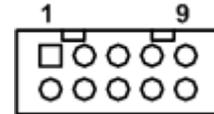

### 2.4.7 I2C Connector (CN11)

This connector is a 3-pin (pitch=1.25mm), which is compliant with Molex 530470310, for I2C interface.

 
Pin	Signal
1	I2C_CLK_SBY
2	I2C_DAT_SBY
3	GND



### 2.4.8 SATA Power Connector (CN12)

The CN12 is a 4-pin (pitch=2mm) wafer connector, which is compliant with JST B4B-PH-K-S, for SATA power interface.



Pin	Signal
1	+12V
2	GND
3	GND
4	+5V

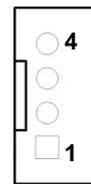

### 2.4.9 Fan Connector (CN13)

A fan interface is available through this connector. You can find fan speed within BIOS Setup Utility if fan is installed. For further information, see BIOS Setup Utility: Advanced\Hardware Monitor\PC Health Status (see section 4.4).

  
Pin	Signal
1	GND
2	+12V level
3	Fan speed feedback

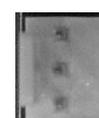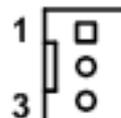

### 2.4.10 Inverter Connector (CN14)

This is a DF13-8P-1.25C 8-pin (pitch=1.25mm) connector for inverter interface. We strongly recommend you to use the matching DF13-8P-1.25C connector to avoid malfunction.


Pin	Signal
1	VBL1 (+12V level)
2	VBL1 (+12V level)
3	VBL2 (+5V level)
4	VBL_ENABLE
5	GND
6	GND
7	GND
8	VBL Brightness Control

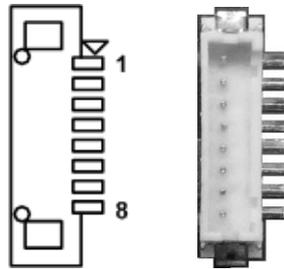

### 2.4.11 SATA Connector (CN15)

This Serial Advanced Technology Attachment (Serial ATA or SATA) connector is for high-speed SATA interface. It is a computer bus interface for connecting to devices such as hard disk drive.

Pin	Signal
1	GND
2	SATA_TXP0
3	SATA_TXN0
4	GND
5	SATA_RXN0
6	SATA_RXP0
7	GND

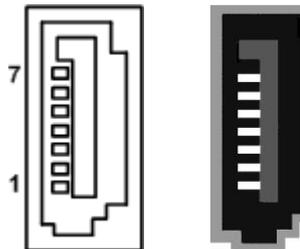


### 2.4.12 LVDS Connector (CN16)

This board has a 2x20-pin (pitch=1mm) connector for LVDS LCD interface. It is strongly recommended to use the matching JST SHDR-40VS-B connector for LVDS interface. Pin 1~6 VCCM can be set to +3.3V, +5V or +12V by setting JP5 (see section 2.3.3).

#### 18-bit single channel

Pin	Signal	Pin	Signal
1	VCCM	2	VCCM
3	VCCM	4	VCCM
5	VCCM	6	VCCM
7	N.C	8	N.C
9	GND	10	GND
11	N.C	12	N.C
13	N.C	14	N.C
15	GND	16	GND
17	N.C	18	N.C
19	N.C	20	N.C
21	GND	22	GND
23	Channel A D0-	24	N.C
25	Channel A D0+	26	N.C
27	GND	28	GND
29	Channel A D1-	30	N.C
31	Channel A D1+	32	N.C
33	GND	34	GND
35	Channel A D2-	36	Channel A CLK-
37	Channel A D2+	38	Channel A CLK+
39	GND	40	GND

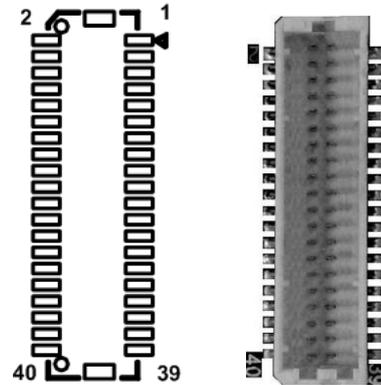

**24-bit single channel**

Pin	Signal	Pin	Signal
1	VCCM	2	VCCM
3	VCCM	4	VCCM
5	VCCM	6	VCCM
7	N.C	8	N.C
9	GND	10	GND
11	N.C	12	N.C
13	N.C	14	N.C
15	GND	16	GND
17	N.C	18	N.C
19	N.C	20	N.C
21	GND	22	GND
23	Channel A D0-	24	N.C
25	Channel A D0+	26	N.C
27	GND	28	GND
29	Channel A D1-	30	Channel A D3-
31	Channel A D1+	32	Channel A D3+
33	GND	34	GND
35	Channel A D2-	36	Channel A CLK-
37	Channel A D2+	38	Channel A CLK+
39	GND	40	GND

**18-bit dual channel**

Pin	Signal	Pin	Signal
1	VCCM	2	VCCM
3	VCCM	4	VCCM
5	VCCM	6	VCCM
7	N.C	8	N.C
9	GND	10	GND
11	N.C	12	Channel B D0-
13	N.C	14	Channel B D0+
15	GND	16	GND
17	Channel B CLK-	18	Channel B D1-
19	Channel B CLK+	20	Channel B D1+
21	GND	22	GND
23	Channel A D0-	24	Channel B D2-
25	Channel A D0+	26	Channel B D2+
27	GND	28	GND
29	Channel A D1-	30	N.C
31	Channel A D1+	32	N.C
33	GND	34	GND
35	Channel A D2-	36	Channel A CLK-
37	Channel A D2+	38	Channel A CLK+
39	GND	40	GND


**24-bit dual channel**

Pin	Signal	Pin	Signal
1	VCCM	2	VCCM
3	VCCM	4	VCCM
5	VCCM	6	VCCM
7	N.C	8	N.C
9	GND	10	GND
11	Channel B D3-	12	Channel B D0-
13	Channel B D3+	14	Channel B D0+
15	GND	16	GND
17	Channel B CLK-	18	Channel B D1-
19	Channel B CLK+	20	Channel B D1+
21	GND	22	GND
23	Channel A D0-	24	Channel B D2-
25	Channel A D0+	26	Channel B D2+
27	GND	28	GND
29	Channel A D1-	30	Channel A D3-
31	Channel A D1+	32	Channel A D3+
33	GND	34	GND
35	Channel A D2-	36	Channel A CLK-
37	Channel A D2+	38	Channel A CLK+
39	GND	40	GND

### 2.4.13 COM1 and COM2 Wafer Connector (CN17 and CN18)

The CN17 (optional) and CN18 are 2x5-pin connectors for COM1 and COM2 interface, respectively. The pin assignments of RS-232/422/485 are listed in table below. If you need COM1 and COM2 to support RS-422 or RS-485 communication mode, please refer to BIOS setting in section 4.4.


Pin	RS-232	RS-422	RS-485
1	DCD	TX-	Data-
2	DSR	No use	No use
3	RXD	TX+	Data+
4	RTS	No use	No use
5	TXD	RX+	No use
6	CTS	No use	No use
7	DTR	RX-	No use
8	RI	No use	No use
9	GND	No use	No use
10	No use	No use	No use

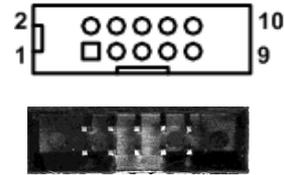

### 2.4.14 HDMI Connector (CN19)

The HDMI (High-Definition Multimedia Interface) is a compact digital interface which is capable of transmitting high-definition video and high-resolution audio over a single cable. Its interface is available through connector CN19.

Pin	Signal	Pin	Signal
1	HDMI OUT_DATA2+	2	GND
3	HDMI OUT_DATA2-	4	HDMI OUT_DATA1+
5	GND	6	HDMI OUT_DATA1-
7	HDMI OUT_DATA0+	8	GND
9	HDMI OUT_DATA0-	10	HDMI OUT_Clock+
11	GND	12	HDMI OUT_Clock-
13	N.C.	14	N.C.
15	HDMI OUT_SCL	16	HDMI OUT_SDA
17	GND	18	+5V
19	HDMI_HTPLG		

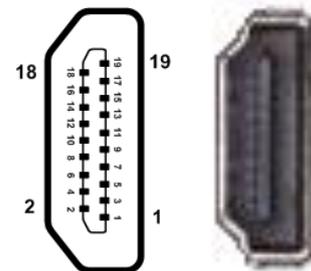


### 2.4.15 USB 3.0 Ports (CN20 and CN21)

The Universal Serial Bus (compliant with USB 3.0 (5Gb/s)) connector on the rear I/O is for installing USB peripherals such as keyboard, mouse, scanner, etc.

#### USB 3.0 port 0 and 1 (CN20):

Pin	Signal	Pin	Signal
1	USB_VCC (+5V )	10	USB_VCC (+5V )
2	USB #0_D-	11	USB #1_D-
3	USB #0_D+	12	USB #1_D+
4	GND	13	GND
5	SSRX0-	14	SSRX1-
6	SSRX0+	15	SSRX1+
7	GND	16	GND
8	SSTX0-	17	SSTX1-
9	SSTX0+	18	SSTX1+

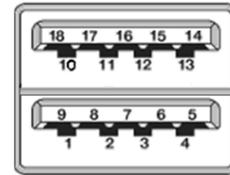


#### USB 3.0 port 2 and 3 (CN21):

Pin	Signal	Pin	Signal
1	USB_VCC (+5V )	10	USB_VCC (+5V )
2	USB #2_D-	11	USB #3_D-
3	USB #2_D+	12	USB #3_D+
4	GND	13	GND
5	SSRX2-	14	SSRX3-
6	SSRX2+	15	SSRX3+
7	GND	16	GND
8	SSTX2-	17	SSTX3-
9	SSTX2+	18	SSTX3+

### 2.4.16 COM1 D-Sub Connector (CN22)

This is a standard 9-pin D-Sub connector for COM1 interface. The pin assignments of RS-232/422/485 are listed in table below. If you need COM1 to support RS-422 or RS-485 communication mode, please refer to BIOS setting in section 4.4.


 
Pin	RS-232	RS-422	RS-485
1	DCD	TX-	Data-
2	RXD	TX+	Data+
3	TXD	RX+	No use
4	DTR	RX-	No use
5	GND	No use	No use
6	DSR	No use	No use
7	RTS	No use	No use
8	CTS	No use	No use
9	RI	No use	No use

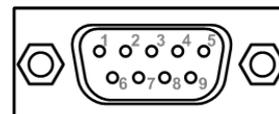

### 2.4.17 VGA Connector (CN23) (Optional)

This is a standard 15-pin D-Sub connector. It is commonly used for VGA display. This VGA interface configuration can be configured via software utility.

  Pin	Signal	Pin	Signal
1	RED	2	GREEN
3	BLUE	4	N.C
5	GND	6	GND
7	GND	8	GND
9	CRT_VCC	10	GND
11	N.C	12	DDC_DATA
13	Hsync	14	Vsync
15	DDC_CLK		

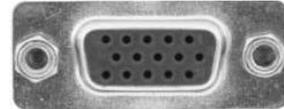
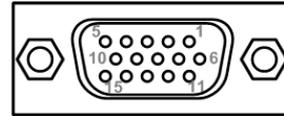


### 2.4.18 ATX Power Connector (ATX1)

Steady and sufficient power can be supplied to all components on the board by connecting the power connector. Please make sure all components and devices are properly installed before connecting the power connector.

The ATX1 is a 4-pin power supply interface. External power supply plug fits into ATX1 in only one orientation. Properly press down power supply plug until it completely and firmly fits into this connector. Loose connection may cause system instability.



Pin	Signal
1	GND
2	GND
3	+12V
4	+12V

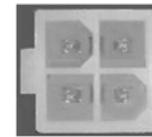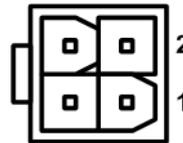

### 2.4.19 Ethernet Ports (LAN1 and LAN2)

The board has two RJ-45 connectors: LAN1 and LAN2. Ethernet connection can be established by plugging one end of the Ethernet cable into this RJ-45 connector and the other end (phone jack) to a 1000/100/10-Base-T hub.


Pin	1000 Base-T	100/10 Base-T	Description
L1	BI_DA+	TX+	Bidirectional or Transmit Data+
L2	BI_DA-	TX-	Bidirectional or Transmit Data-
L3	BI_DB+	RX+	Bidirectional or Receive Data+
L4	BI_DC+	N.C.	Bidirectional or Not Connected
L5	BI_DC-	N.C.	Bidirectional or Not Connected
L6	BI_DB-	RX-	Bidirectional or Receive Data-
L7	BI_DD+	N.C.	Bidirectional or Not Connected
L8	BI_DD-	N.C.	Bidirectional or Not Connected
A	Active Link LED (Yellow) Off: No link Blinking: Data activity detected		
B	Speed LED 1000: Orange 100/10: Green/OFF		

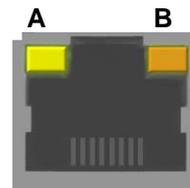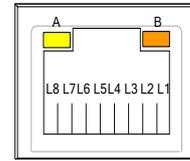

### 2.4.20 Full-size PCI-Express Mini Card Connector (SCN1)

This is a full-size PCI-Express Mini Card connector on the bottom side supporting PCI-Express x1 or USB 2.0. It also complies with PCI-Express Mini Card Spec. V1.2.



Pin	Signal	Pin	Signal
1	WAKE#	2	+3.3VSB
3	No use	4	GND
5	No use	6	+1.5V
7	CLKREQ#	8	SIM_PWR
9	GND	10	SIM_DATA
11	REFCLK-	12	SIM_CLK
13	REFCLK+	14	SIM_REST
15	GND	16	SIM_VPP
17	No use	18	GND
19	No use	20	W_DISABLE#
21	GND	22	PERST#
23	PE_RXN3	24	+3.3VSB
25	PE_RXP3	26	GND
27	GND	28	+1.5V
29	GND	30	SMB_CLK
31	PE_TXN3	32	SMB_DATA
33	PE_TXP3	34	GND
35	GND	36	USB_D6-
37	GND	38	USB_D6+
39	+3.3VSB	40	GND
41	+3.3VSB	42	No use
43	GND	44	No use
45	No use	46	No use
47	No use	48	+1.5V
49	No use	50	GND
51	No use	52	+3.3VSB

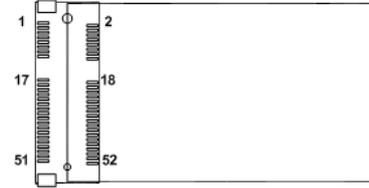

### 2.4.21 SIM Card Socket (SCN2)

This board has SCN2 socket on the bottom side for inserting SIM Card. In order to work properly, the SIM Card must be used together with 3G module which is inserted to SCN1 or SCN3. It is mainly used in 3G wireless network application.


Pin	Signal
1	PWR
2	RST
3	CLK
4	NC
5	GND
6	VPP
7	I/O
8	NC

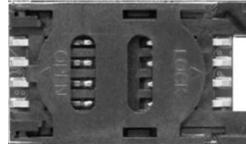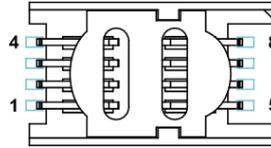

### 2.4.22 Full-size PCI-Express Mini Card or mSATA Connector (SCN3)

This is a full-size PCI-Express Mini Card connector on the bottom side complying with PCI-Express Mini Card Spec. V1.2. It supports either PCI-Express, USB 2.0 or SATA (mSATA). Since the default setting is PCI-Express, if mSATA is needed to insert, please refer to section 4.4 to change the setting.


Pin	Signal	Pin	Signal
1	WAKE#	2	+3.3VSB
3	No use	4	GND
5	No use	6	+1.5V
7	CLKREQ#	8	SIM_PWR
9	GND	10	SIM_DATA
11	REFCLK-	12	SIM_CLK
13	REFCLK+	14	SIM_REST
15	GND	16	SIM_VPP
17	No use	18	GND
19	No use	20	W_DISABLE#
21	GND	22	PERST#
23	PE_RXN2/SATA_RXP	24	+3.3VSB
25	PE_RXP2/SATA_RXN	26	GND
27	GND	28	+1.5V
29	GND	30	SMB_CLK
31	PE_TXN2/SATA_TXN	32	SMB_DATA
33	PE_TXP2/SATA_TXP	34	GND
35	GND	36	USB_D5-
37	GND	38	USB_D5+
39	+3.3VSB	40	GND
41	+3.3VSB	42	No use
43	GND	44	No use
45	No use	46	No use
47	No use	48	+1.5V
49	No use	50	GND
51	No use	52	+3.3VSB

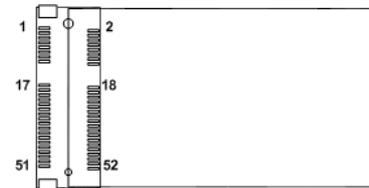

### 2.4.23 eDP Connector (SCN4) (Optional)

The eDP interface is available through 40-pin connector (SCN4), which is compliant with IPEX-20143. Pin 1~4 LCD\_VCC can be set to +3.3V, +5V or +12V with JP5 (see section 2.3.3).

Pin	Signal	Pin	Signal
1	LCD_VCC	21	TXN0
2	LCD_VCC	22	TXP0
3	LCD_VCC	23	High Speed_GND
4	LCD_VCC	24	AUXP
5	NC	25	AUXN
6	LCD_GND	26	High Speed_GND
7	LCD_GND	27	BKLT_GND
8	LCD_GND	28	BKLT_GND
9	LCD_GND	29	BKLT_GND
10	HPD	30	BKLT_GND
11	High Speed_GND	31	NC
12	TXN3	32	BKLT_CTRL
13	TXP3	33	BKLT_EN
14	High Speed_GND	34	NC
15	TXN2	35	NC
16	TXP2	36	BKLT_VCC_12V
17	High Speed_GND	37	BKLT_VCC_12V
18	TXN1	38	BKLT_VCC_12V
19	TXP1	39	BKLT_VCC_12V
20	High Speed_GND	40	NC

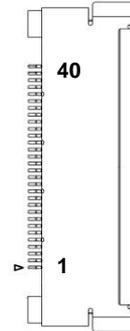

# Chapter 3

## Hardware Description

### 3.1 Microprocessors

The CAPA311 supports Intel® Atom® x5-E3940 and CAPA312 supports Intel® Pentium® N4200 and Celeron® N3350 processors which enable your system to operate under Windows® 10 environments. The system performance depends on the microprocessor. Make sure all correct settings are arranged for the installed microprocessor to prevent the CPU from damages.

### 3.2 BIOS

The CAPA311/312 uses AMI Plug and Play BIOS with a single 64Mbit SPI Flash.

### 3.3 System Memory

The CAPA311/312 supports one 204-pin DDR3L SO-DIMM socket for maximum memory capacity up to 8GB DDR3L SDRAMs. The memory module comes in sizes of 2GB, 4GB and 8GB.

### 3.4 I/O Port Address Map

▼		Input/output (IO)
		[0000000000000000 - 000000000000006F] PCI Express Root Complex
		[0000000000000020 - 0000000000000021] Programmable interrupt controller
		[0000000000000024 - 0000000000000025] Programmable interrupt controller
		[0000000000000028 - 0000000000000029] Programmable interrupt controller
		[000000000000002C - 000000000000002D] Programmable interrupt controller
		[000000000000002E - 000000000000002F] Motherboard resources
		[0000000000000030 - 0000000000000031] Programmable interrupt controller
		[0000000000000034 - 0000000000000035] Programmable interrupt controller
		[0000000000000038 - 0000000000000039] Programmable interrupt controller
		[000000000000003C - 000000000000003D] Programmable interrupt controller
		[0000000000000040 - 0000000000000043] System timer
		[000000000000004E - 000000000000004F] Motherboard resources
		[0000000000000050 - 0000000000000053] System timer
		[0000000000000061 - 0000000000000061] Motherboard resources
		[0000000000000062 - 0000000000000062] Microsoft ACPI-Compliant Embedded Controller
		[0000000000000063 - 0000000000000063] Motherboard resources
		[0000000000000065 - 0000000000000065] Motherboard resources
		[0000000000000066 - 0000000000000066] Microsoft ACPI-Compliant Embedded Controller
		[0000000000000067 - 0000000000000067] Motherboard resources
		[0000000000000070 - 0000000000000070] Motherboard resources
		[0000000000000070 - 0000000000000077] System CMOS/real time clock
		[0000000000000078 - 00000000000000CF7] PCI Express Root Complex
		[0000000000000080 - 000000000000008F] Motherboard resources
		[0000000000000092 - 0000000000000092] Motherboard resources
		[00000000000000A0 - 00000000000000A1] Programmable interrupt controller
		[00000000000000A4 - 00000000000000A5] Programmable interrupt controller
		[00000000000000A8 - 00000000000000A9] Programmable interrupt controller
		[00000000000000AC - 00000000000000AD] Programmable interrupt controller
		[00000000000000B0 - 00000000000000B1] Programmable interrupt controller
		[00000000000000B2 - 00000000000000B3] Motherboard resources
		[00000000000000B4 - 00000000000000B5] Programmable interrupt controller
		[00000000000000B8 - 00000000000000B9] Programmable interrupt controller
		[00000000000000BC - 00000000000000BD] Programmable interrupt controller
		[00000000000000E8 - 00000000000000E8] Communications Port (COM4)
		[00000000000000F8 - 00000000000000FF] Communications Port (COM2)
		[000000000000003B0 - 000000000000003BB] Intel(R) HD Graphics
		[000000000000003C0 - 000000000000003DF] Intel(R) HD Graphics
		[000000000000003E8 - 000000000000003EF] Communications Port (COM3)
		[000000000000003F8 - 000000000000003FF] Communications Port (COM1)
		[0000000000000400 - 000000000000047F] Motherboard resources
		[00000000000004D0 - 00000000000004D1] Programmable interrupt controller
		[0000000000000500 - 00000000000005FE] Motherboard resources
		[0000000000000600 - 000000000000061F] Motherboard resources
		[0000000000000680 - 000000000000069F] Motherboard resources
		[0000000000000A00 - 0000000000000A0F] Motherboard resources
		[0000000000000D00 - 000000000000FFFF] PCI Express Root Complex
		[000000000000164E - 000000000000164F] Motherboard resources
		[000000000000D000 - 000000000000DFFF] Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD9
		[000000000000E000 - 000000000000EFFF] Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8
		[000000000000F000 - 000000000000F03F] Intel(R) HD Graphics
		[000000000000F040 - 000000000000F05F] Intel(R) Celeron(R)/Pentium(R) Processor SMBUS - 5AD4
		[000000000000F060 - 000000000000F07F] Standard SATA AHCI Controller
		[000000000000F080 - 000000000000F083] Standard SATA AHCI Controller
		[000000000000F090 - 000000000000F097] Standard SATA AHCI Controller

## 3.5 Interrupt Controller (IRQ) Map

The interrupt controller (IRQ) mapping list is shown as follows:

▼	 Interrupt request (IRQ)	
	 (ISA) 0x00000000 (00)	System timer
	 (ISA) 0x00000003 (03)	Communications Port (COM2)
	 (ISA) 0x00000004 (04)	Communications Port (COM1)
	 (ISA) 0x00000008 (08)	High precision event timer
	 (ISA) 0x0000000A (10)	Communications Port (COM4)
	 (ISA) 0x0000000B (11)	Communications Port (COM3)
	 (ISA) 0x00000036 (54)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System





 (ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
 (ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
 (ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
 (ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
 (ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
 (ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
 (ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
 (ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
 (ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
 (ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
 (ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
 (ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
 (ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
 (ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
 (ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
 (ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System
 (ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
 (ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
 (ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
 (ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
 (ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
 (ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
 (ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
 (ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
 (ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
 (ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
 (ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
 (ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
 (ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
 (ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
 (ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
 (ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
 (ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System
 (ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
 (ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
 (ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System
 (ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System





	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x00000019 (25)	High Definition Audio Controller
	(PCI) 0xFFFFFEEC (-20)	Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
	(PCI) 0xFFFFFEEB (-19)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEED (-18)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEDE (-17)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEDE (-16)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEDE (-15)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEDE (-14)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFEDE (-13)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-12)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-11)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-10)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-9)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-8)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFEDE (-7)	Intel(R) Trusted Execution Engine Interface
	(PCI) 0xFFFFFEDE (-6)	Intel(R) HD Graphics
	(PCI) 0xFFFFFEDE (-5)	Standard SATA AHCI Controller
	(PCI) 0xFFFFFEDE (-4)	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5ADA
	(PCI) 0xFFFFFEDE (-3)	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD9
	(PCI) 0xFFFFFEDE (-2)	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8

## 3.6 Memory Map

The memory mapping list is shown as follows:

▼	 Memory	
	[0000000000A0000 - 0000000000BFFFFF]	Intel(R) HD Graphics
	[0000000000A0000 - 0000000000BFFFFF]	PCI Express Root Complex
	[0000000000C0000 - 0000000000DFFFFF]	PCI Express Root Complex
	[0000000000E0000 - 0000000000FFFFFF]	PCI Express Root Complex
	[000000007B800001 - 000000007BFFFFFF]	PCI Express Root Complex
	[000000007C000001 - 000000007CFFFFFF]	PCI Express Root Complex
	[0000000080000000 - 000000008FFFFFFF]	Intel(R) HD Graphics
	[0000000080000000 - 00000000CFFFFFFF]	PCI Express Root Complex
	[0000000090000000 - 0000000090FFFFFF]	Intel(R) HD Graphics
	[0000000091000000 - 00000000910FFFFFFF]	High Definition Audio Controller
	[0000000091100000 - 000000009111FFFFFF]	Intel(R) I211 Gigabit Network Connection #2
	[0000000091100000 - 000000009111FFFFFF]	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD9
	[0000000091120000 - 0000000091123FFF]	Intel(R) I211 Gigabit Network Connection #2
	[0000000091200000 - 000000009121FFFF]	Intel(R) I211 Gigabit Network Connection
	[0000000091200000 - 00000000912FFFFFFF]	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8
	[0000000091220000 - 0000000091223FFF]	Intel(R) I211 Gigabit Network Connection
	[0000000091300000 - 000000009130FFFF]	Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
	[0000000091310000 - 0000000091313FFF]	High Definition Audio Controller
	[0000000091314000 - 0000000091315FFF]	Standard SATA AHCI Controller
	[0000000091316000 - 00000000913160FF]	Intel(R) Celeron(R)/Pentium(R) Processor SMBUS - 5AD4
	[0000000091317000 - 00000000913177FF]	Standard SATA AHCI Controller
	[0000000091318000 - 00000000913180FF]	Standard SATA AHCI Controller
	[000000009131B000 - 000000009131BFFF]	Intel(R) Trusted Execution Engine Interface
	[00000000E0000000 - 00000000EFFFFFFF]	Motherboard resources
	[00000000E0000000 - 00000000EFFFFFFF]	PCI Express Root Complex
	[00000000FEA00000 - 00000000FEAFFFFFFF]	Motherboard resources
	[00000000FED00000 - 00000000FED003FF]	High precision event timer
	[00000000FED01000 - 00000000FED01FFF]	Motherboard resources
	[00000000FED03000 - 00000000FED03FFF]	Motherboard resources
	[00000000FED06000 - 00000000FED06FFF]	Motherboard resources
	[00000000FED08000 - 00000000FED09FFF]	Motherboard resources
	[00000000FED1C000 - 00000000FED1CFFF]	Motherboard resources
	[00000000FED40000 - 00000000FED40FFF]	Trusted Platform Module 1.2
	[00000000FED80000 - 00000000FEDBFFFF]	Motherboard resources
	[00000000FEE00000 - 00000000FEEFFFFFFF]	Motherboard resources

---

# Chapter 4

## AMI BIOS Setup Utility

The AMI UEFI BIOS provides users with a built-in setup program to modify basic system configuration. All configured parameters are stored in a flash chip to save the setup information whenever the power is turned off. This chapter provides users with detailed description about how to set up basic system configuration through the AMI BIOS setup utility.

### 4.1 Starting

To enter the setup screens, follow the steps below:

1. Turn on the computer and press the <Del> key immediately.
2. After you press the <Del> key, the main BIOS setup menu displays. You can access the other setup screens from the main BIOS setup menu, such as the Advanced and Chipset menus.



**Note**

*If your computer cannot boot after making and saving system changes with BIOS setup, you can restore BIOS optimal defaults by setting JP3 (see section 2.3.1).*

It is strongly recommended that you should avoid changing the chipset's defaults. Both AMI and your system manufacturer have carefully set up these defaults that provide the best performance and reliability.

### 4.2 Navigation Keys

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F2>, <Enter>, <ESC>, <Arrow> keys, and so on.




**Note**

*Some of the navigation keys differ from one screen to another.*

Hot Keys	Description
→← Left/Right	The Left and Right <Arrow> keys allow you to select a setup screen.
↑↓ Up/Down	The Up and Down <Arrow> keys allow you to select a setup screen or sub-screen.
+– Plus/Minus	The Plus and Minus <Arrow> keys allow you to change the field value of a particular setup item.
Tab	The <Tab> key allows you to select setup fields.
F1	The <F1> key allows you to display the General Help screen.
F2	The <F2> key allows you to Load Previous Values.
F3	The <F3> key allows you to Load Optimized Defaults.
F4	The <F4> key allows you to save any changes you have made and exit Setup. Press the <F4> key to save your changes.
Esc	The <Esc> key allows you to discard any changes you have made and exit the Setup. Press the <Esc> key to exit the setup without saving your changes.
Enter	The <Enter> key allows you to display or change the setup option listed for a particular setup item. The <Enter> key can also allow you to display the setup sub- screens.

## 4.3 Main Menu

When you first enter the setup utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the Main tab. System Time/Date can be set up as described below. The Main BIOS setup screen is shown below.

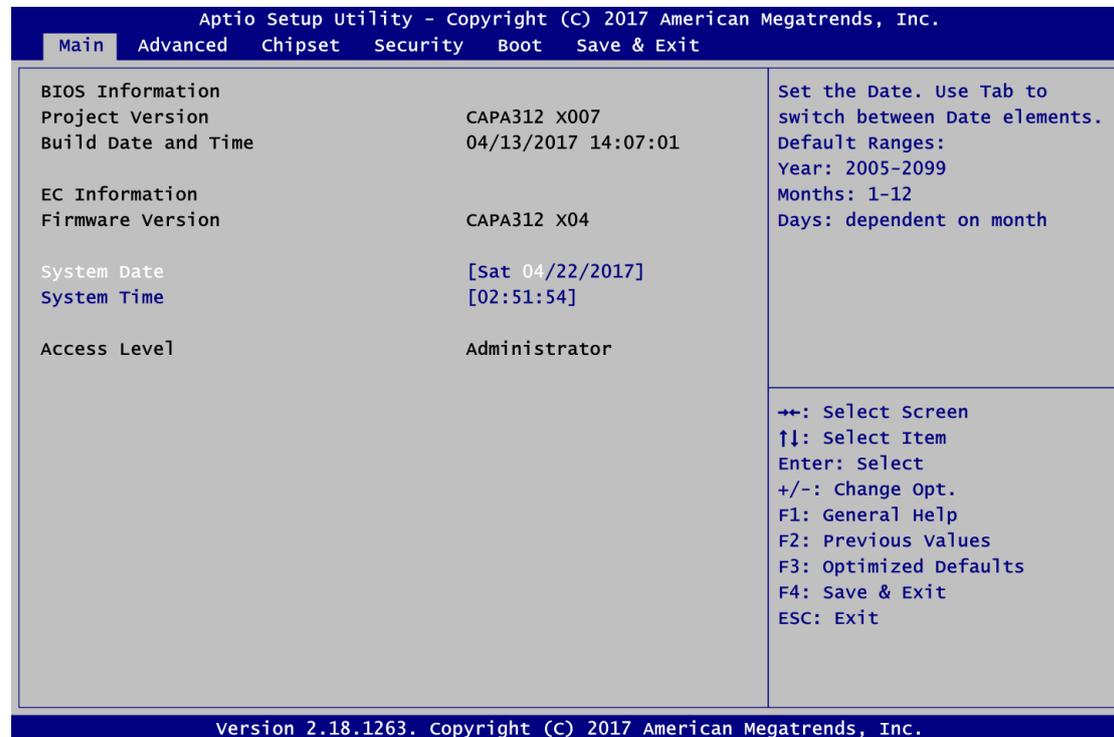


- BIOS and EC Information**  
 Display BIOS and EC firmware information.
- System Date/Time**  
 Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.
- Access Level**  
 Display the access level of current user.

## 4.4 Advanced Menu

The Advanced menu also allows users to set configuration of the CPU and other system devices. You can select any of the items in the left frame of the screen to go to the sub menus:


- ▶ Hardware Monitor
- ▶ ACPI Settings
- ▶ Trusted Computing
- ▶ Super IO Configuration
- ▶ CPU Configuration
- ▶ SATA Configuration
- ▶ USB Configuration
- ▶ Utility Configuration
- ▶ Device Configuration

For items marked with “▶”, please press <Enter> for more options.

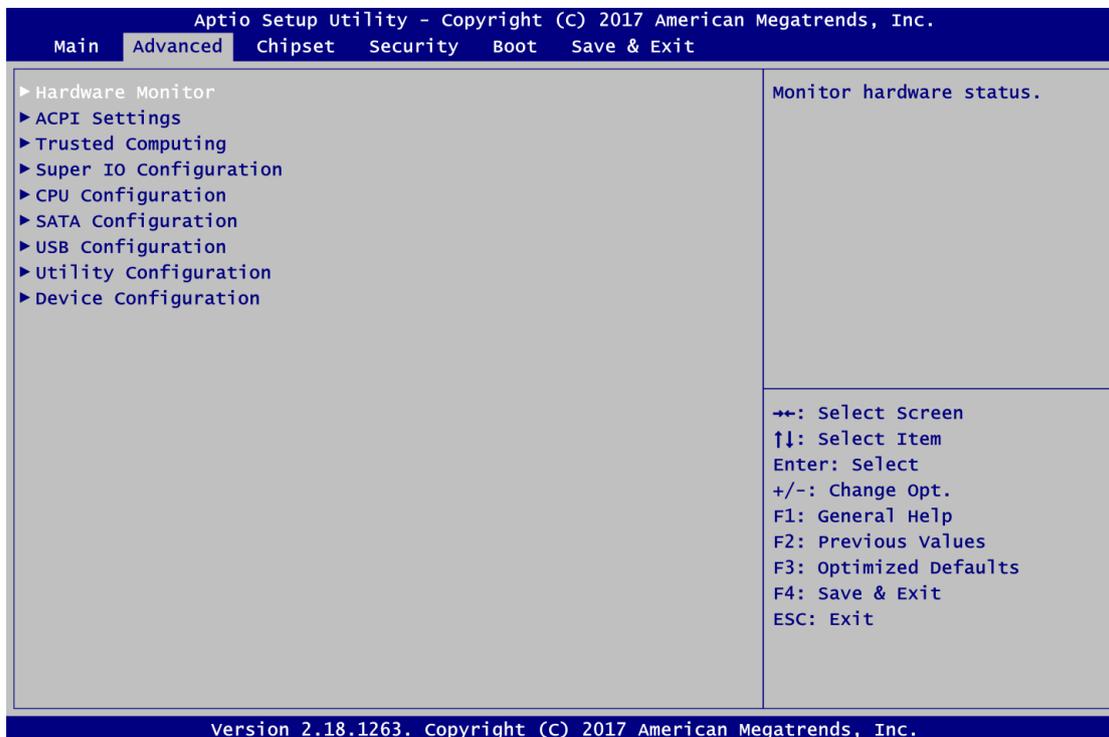


- **Hardware Monitor**

This screen monitors hardware health status.

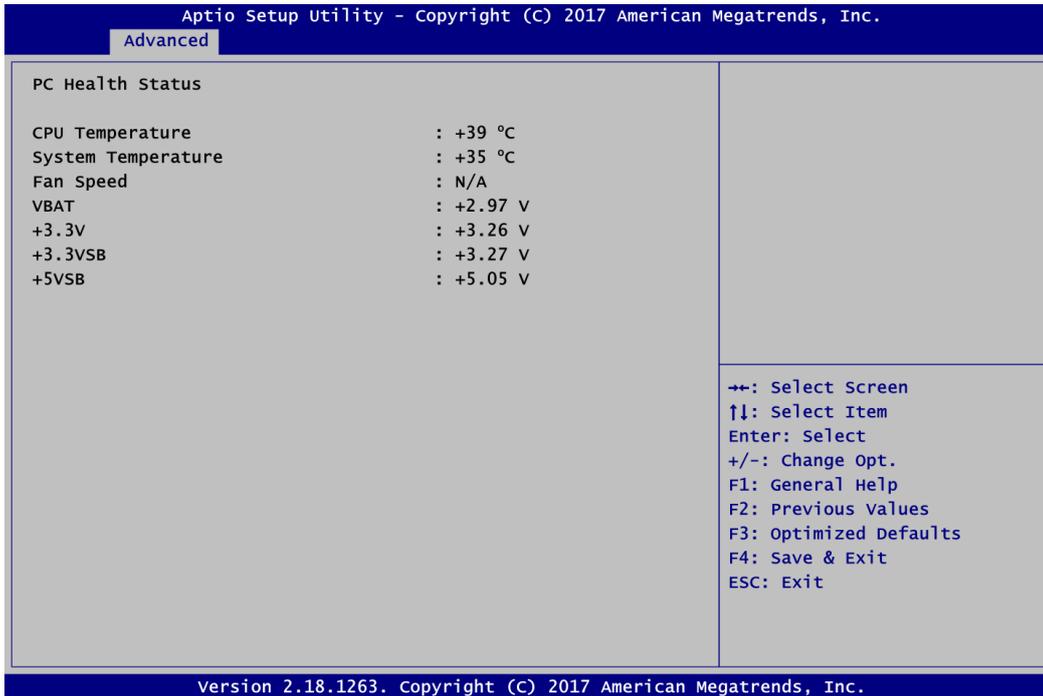

This screen displays the temperature of system and CPU, fan speed in RPM and system voltages (VBAT, +3.3V, +3.3VSB and +5VSB).

- **ACPI Settings**

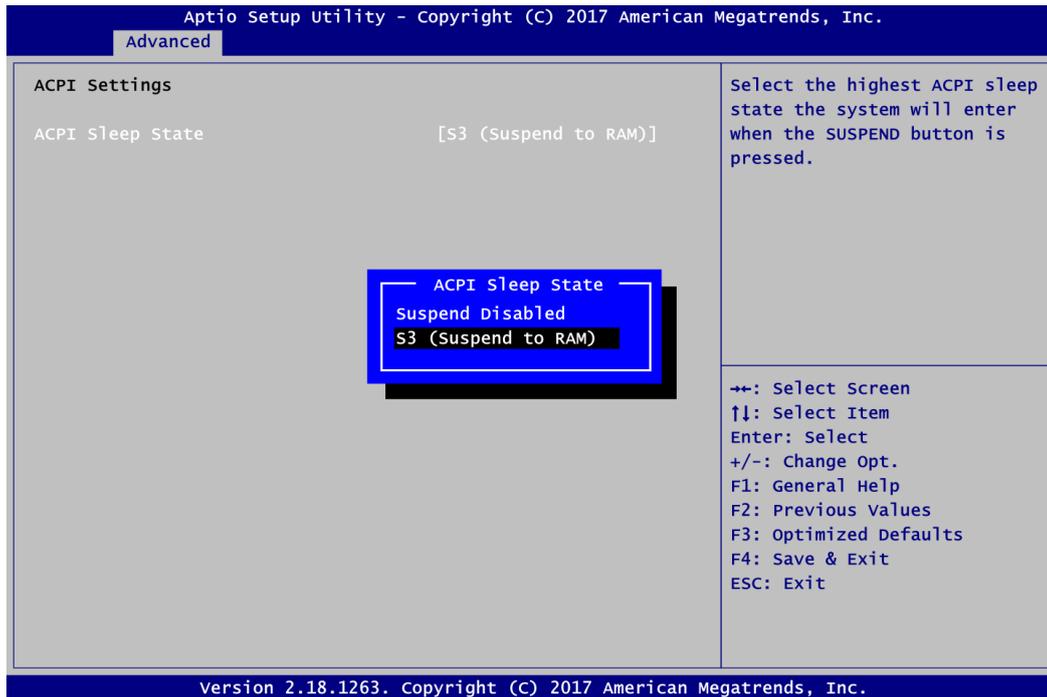


**ACPI Sleep State**

Select the ACPI (Advanced Configuration and Power Interface) sleep state. Configuration options are Suspend Disabled and S3 (Suspend to RAM). The S3 (Suspend to RAM) option selects ACPI sleep state the system will enter when suspend button is pressed.

- **Trusted Computing**

This screen provides function for specifying the TPM settings.

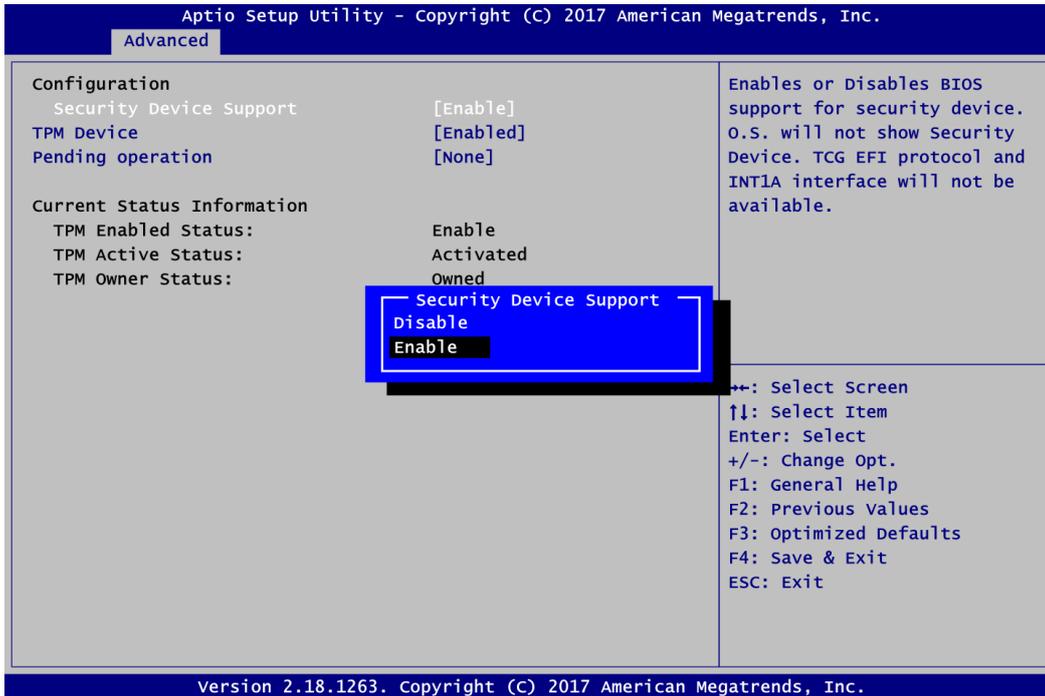


**Security Device Support**

Enable or disable BIOS support for security device. The default setting is Enable.

**TPM Device**

Enable or disable TPM device.

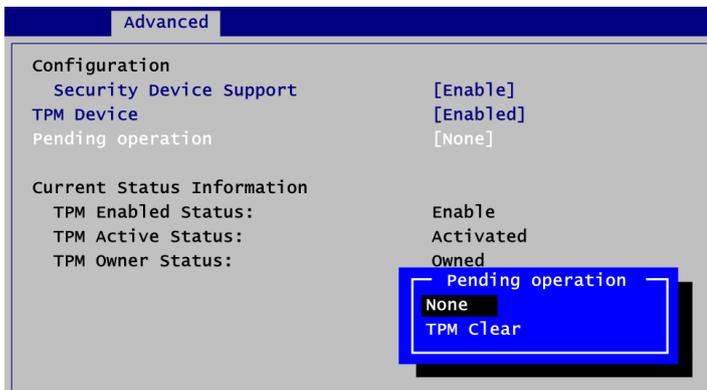

**Pending Operation**


Schedule a TPM operation which will take effect at the next bootup process.

**Current Status Information**

Display current TPM status information.

- **Serial Port Configuration**


You can use this screen to select options for Serial Port Configuration, and change the value of the selected option. A description of the selected item appears on the right side of the screen. For items marked with "▶", please press <Enter> for more options.

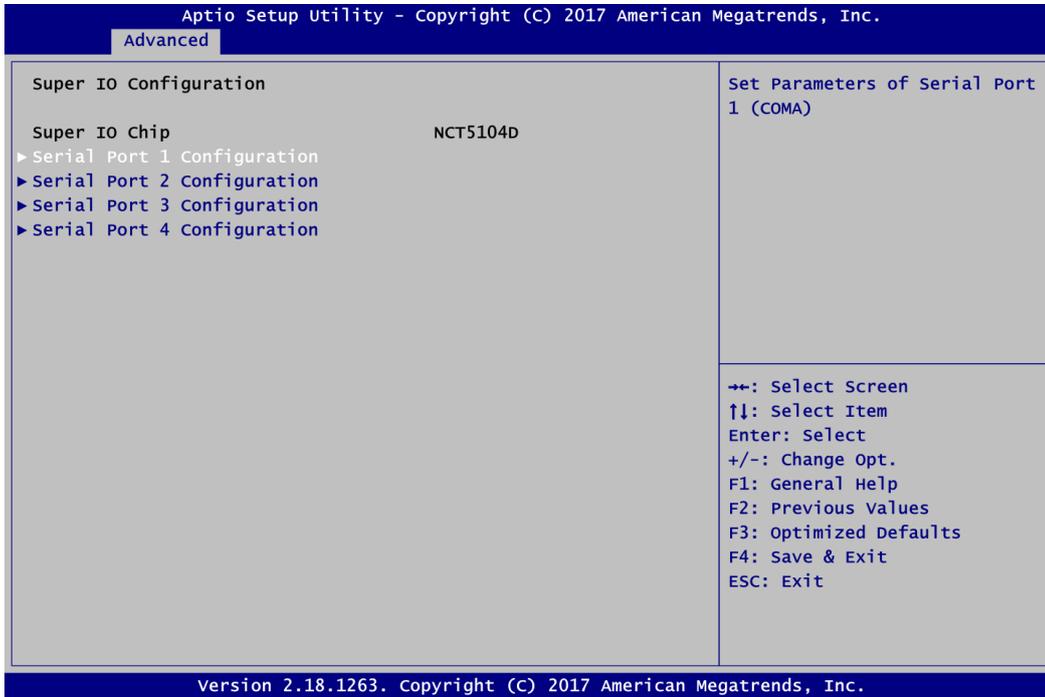

### Serial Port 1~4 Configuration


Use these items to set parameters related to serial port 1~4.

- Serial Port 1 Configuration

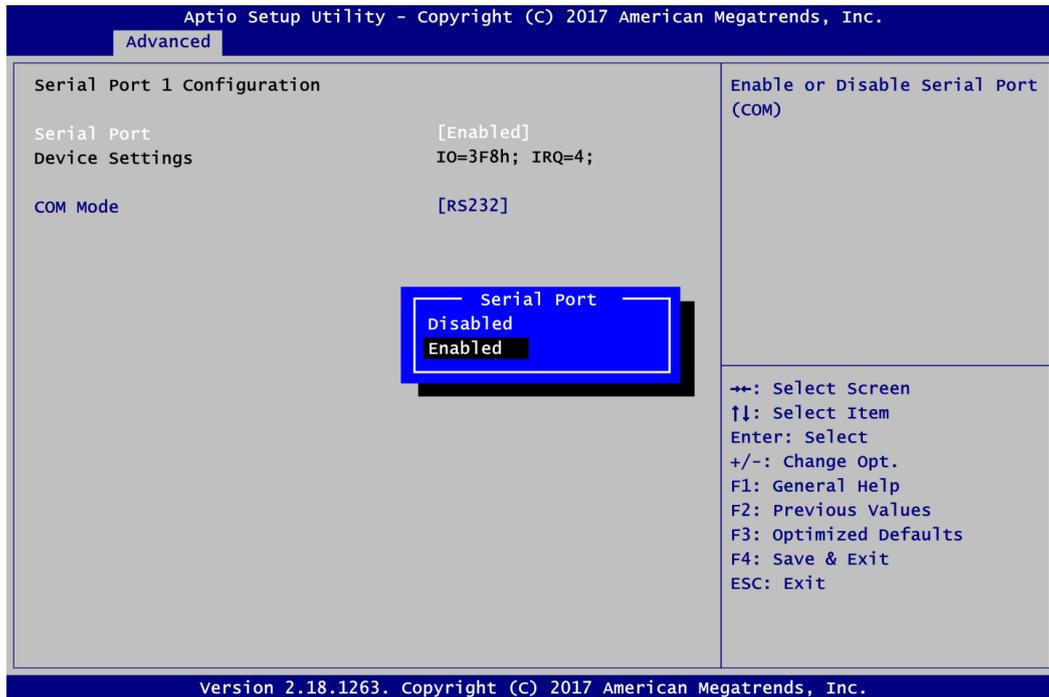

### Serial Port


Enable or disable serial port 1. The optimal setting for base I/O address is 3F8h and for interrupt request address is IRQ4.

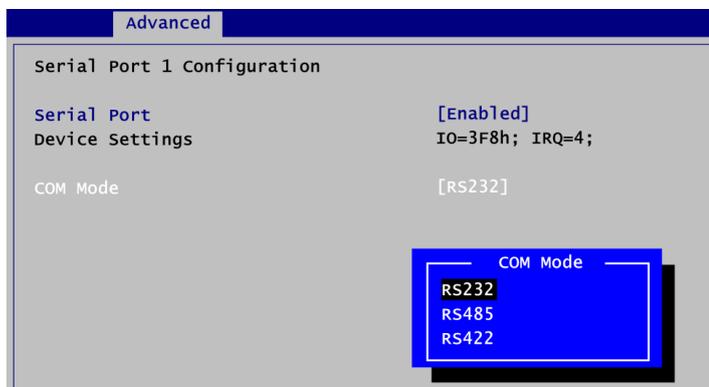

### COM Mode


Use this item to set RS-232/422/485 communication mode.

- **Serial Port 2 Configuration**

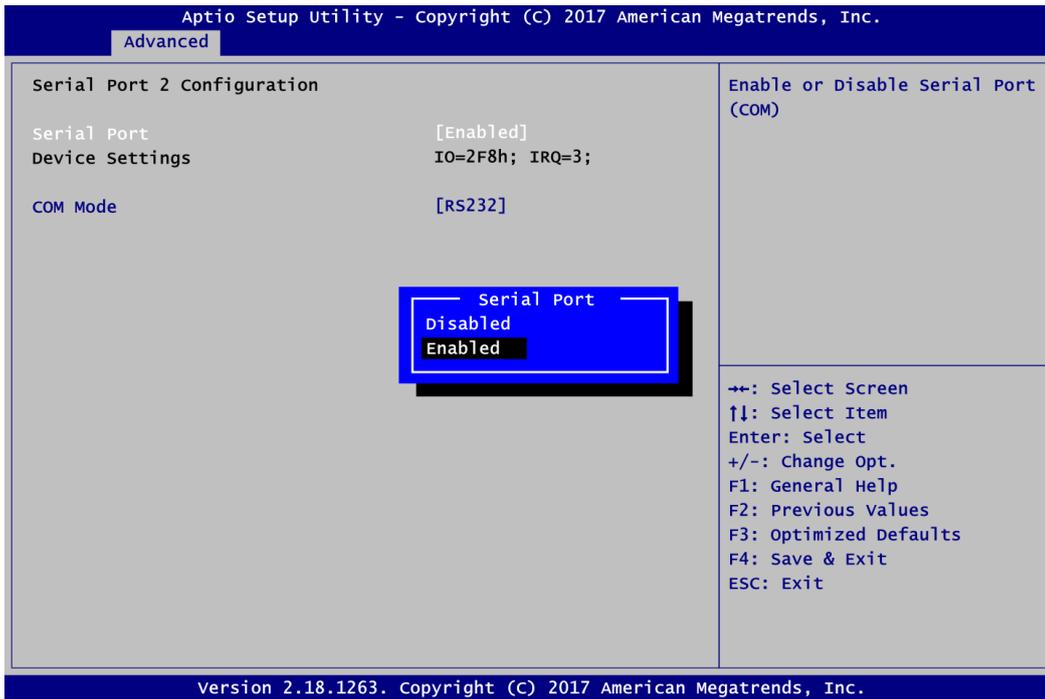

**Serial Port**


Enable or disable serial port 2. The optimal setting for base I/O address is 2F8h and for interrupt request address is IRQ3.

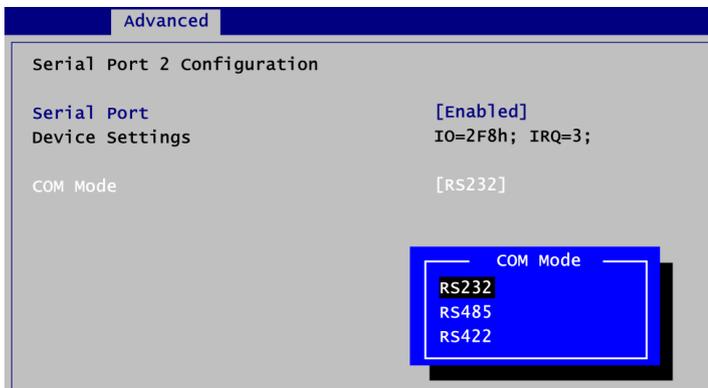

**COM Mode**

Use this item to set RS-232/422/485 communication mode.


- Serial Port 3 Configuration

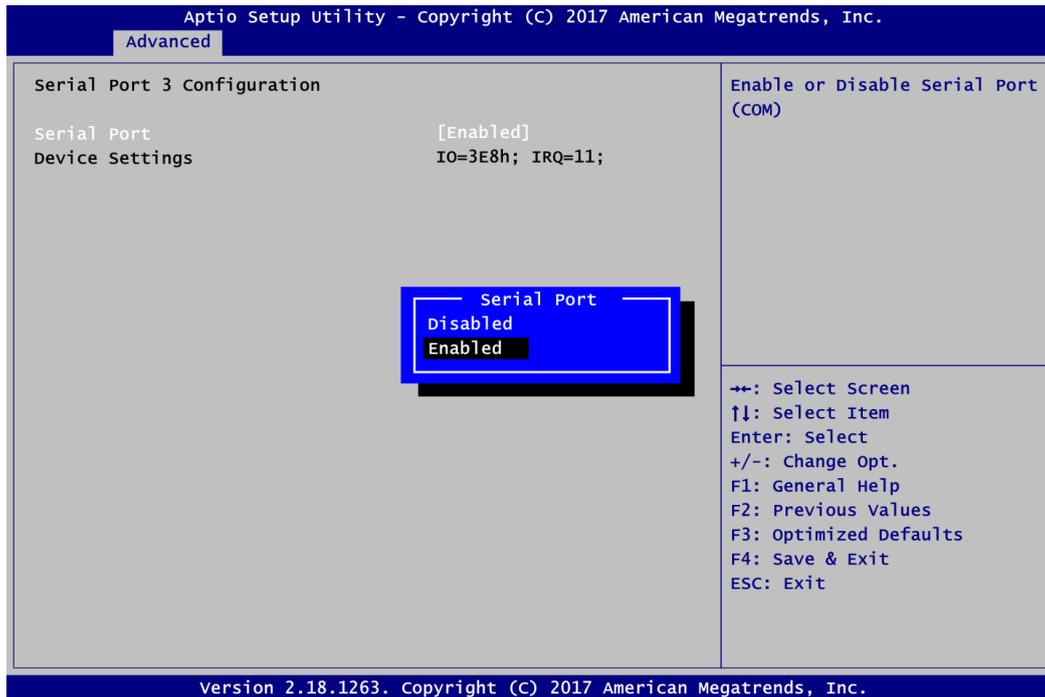

### Serial Port

Enable or disable serial port 3. The optimal setting for base I/O address is 3E8h and for interrupt request address is IRQ11.

- Serial Port 4 Configuration

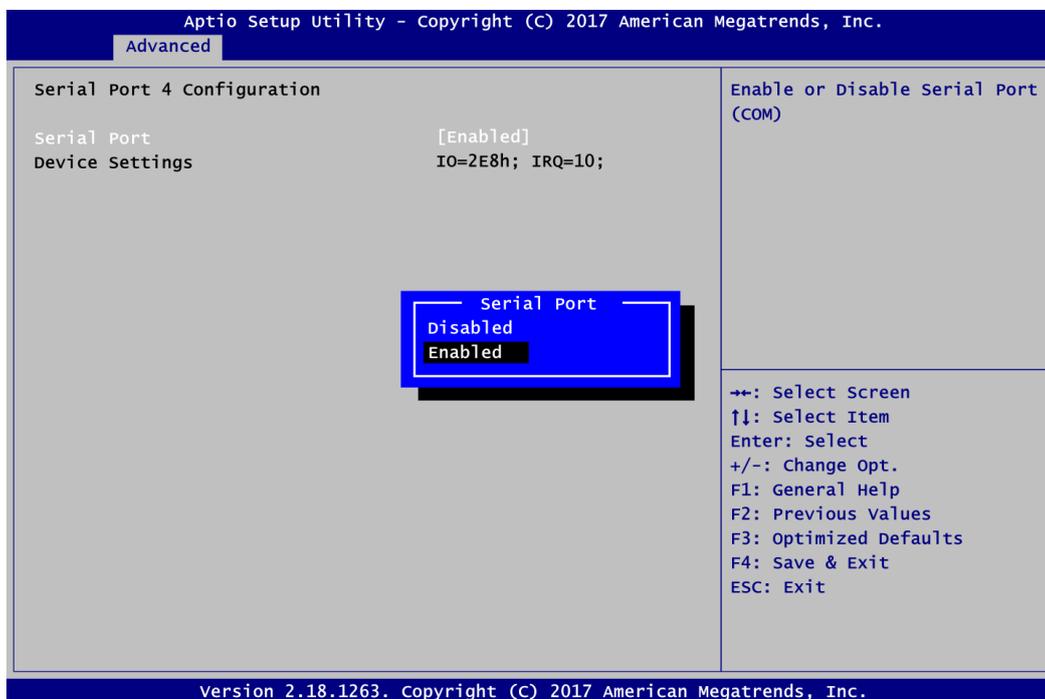


### Serial Port

Enable or disable serial port 4. The optimal setting for base I/O address is 2E8h and for interrupt request address is IRQ10.


**CPU Configuration**

This screen shows the CPU Configuration.

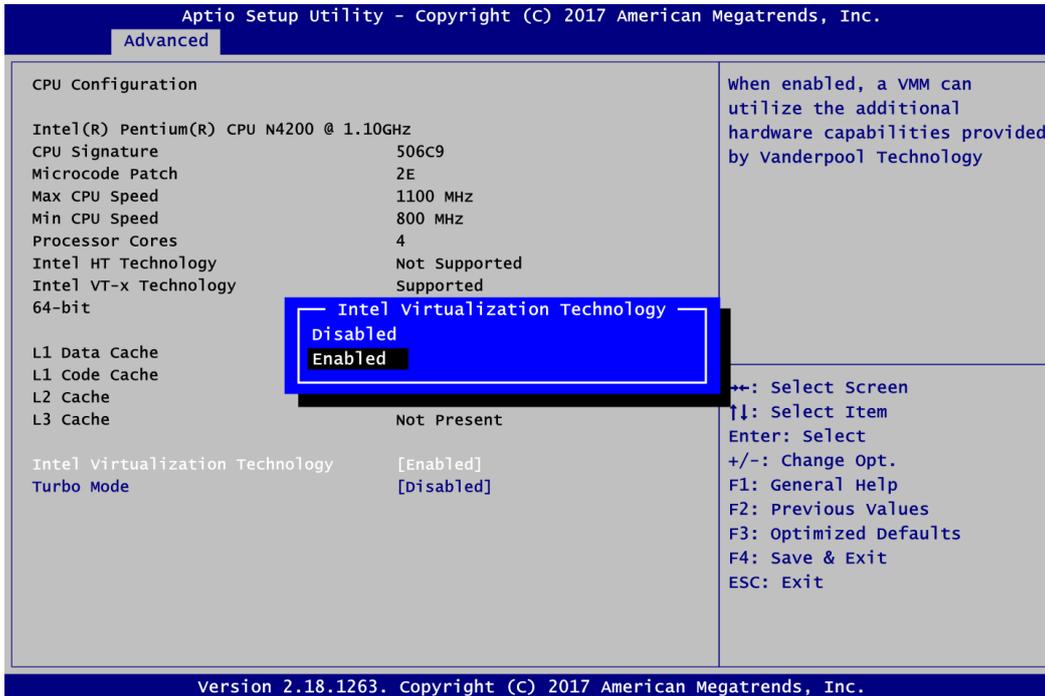

**Intel Virtualization Technology**

Enable or disable Intel Virtualization Technology. When enabled, a VMM (Virtual Machine Mode) can utilize the additional hardware capabilities. It allows a platform to run multiple operating systems and applications independently, hence enabling a computer system to work as several virtual systems.

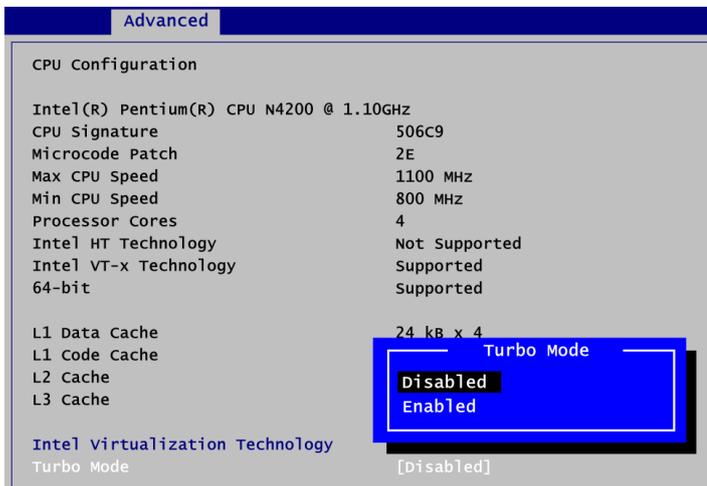


**Turbo Mode**


Enable or disable turbo mode. The default setting is Disabled.

- **SATA Configuration**

In the SATA Configuration menu, you can see the currently installed hardware in the SATA ports. During system boot up, the BIOS automatically detects the presence of SATA devices.

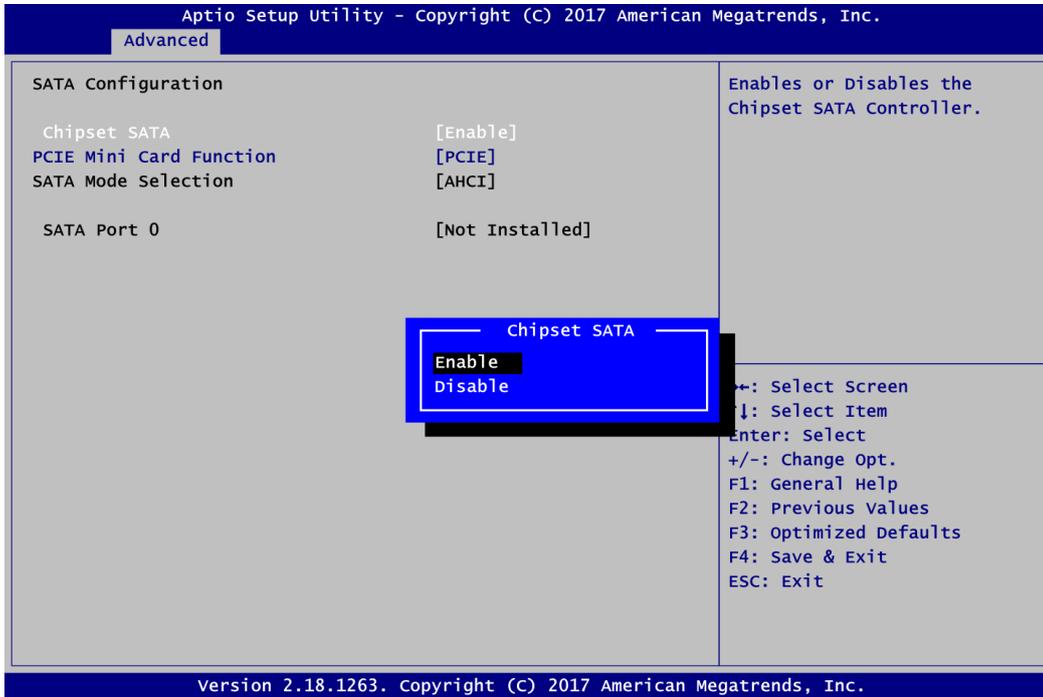**Chipset SATA**

Enable or disable Chipset SATA Controller. The default is Enable.

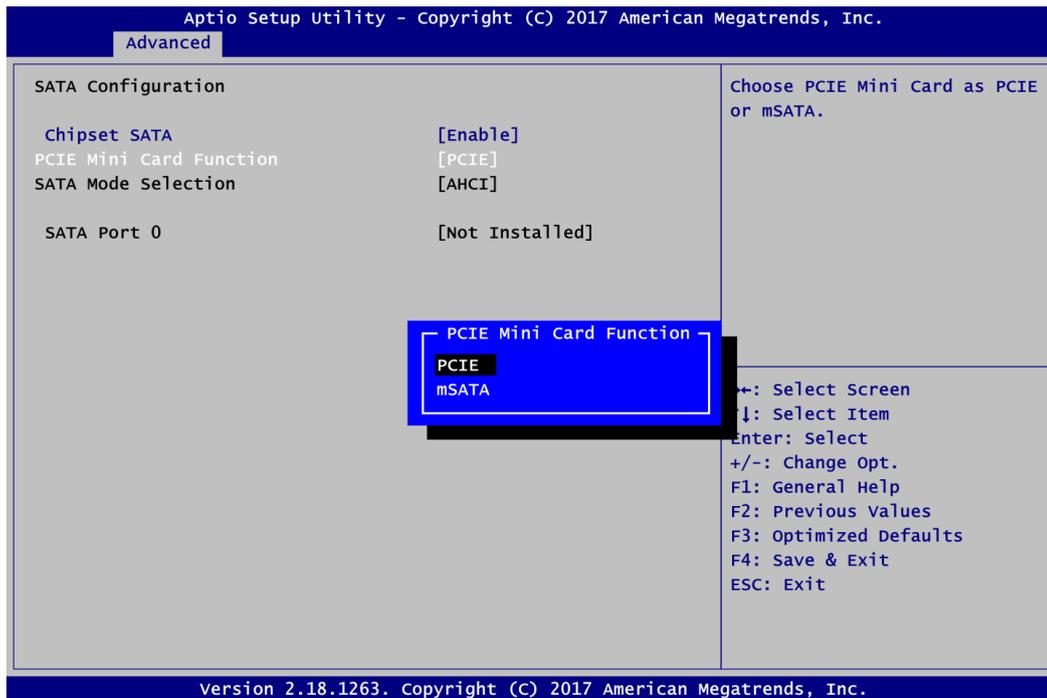


### PCIE Mini Card Function

Select PCI-Express Mini Card or mSATA support for SCN3. The default is PCIE. If mSATA is needed to insert to SCN3 (see section 2.4.22), please change setting to mSATA.

### SATA Mode Selection


The SATA mode is AHCI.

- **USB Configuration**

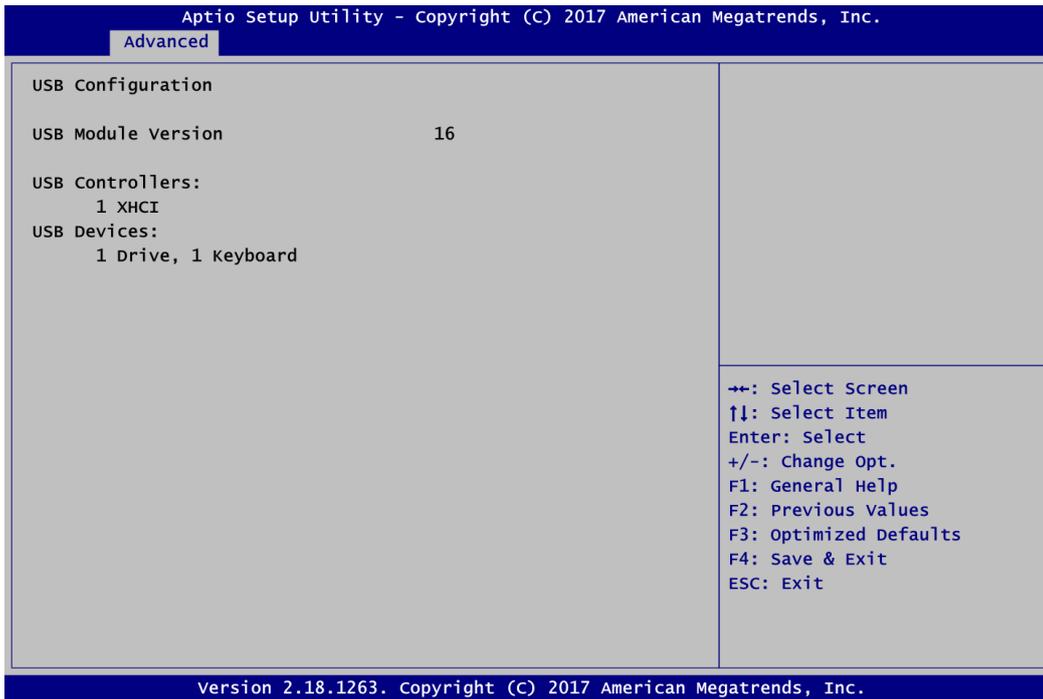**USB Devices**

Display all detected USB devices.

- **Utility Configuration**

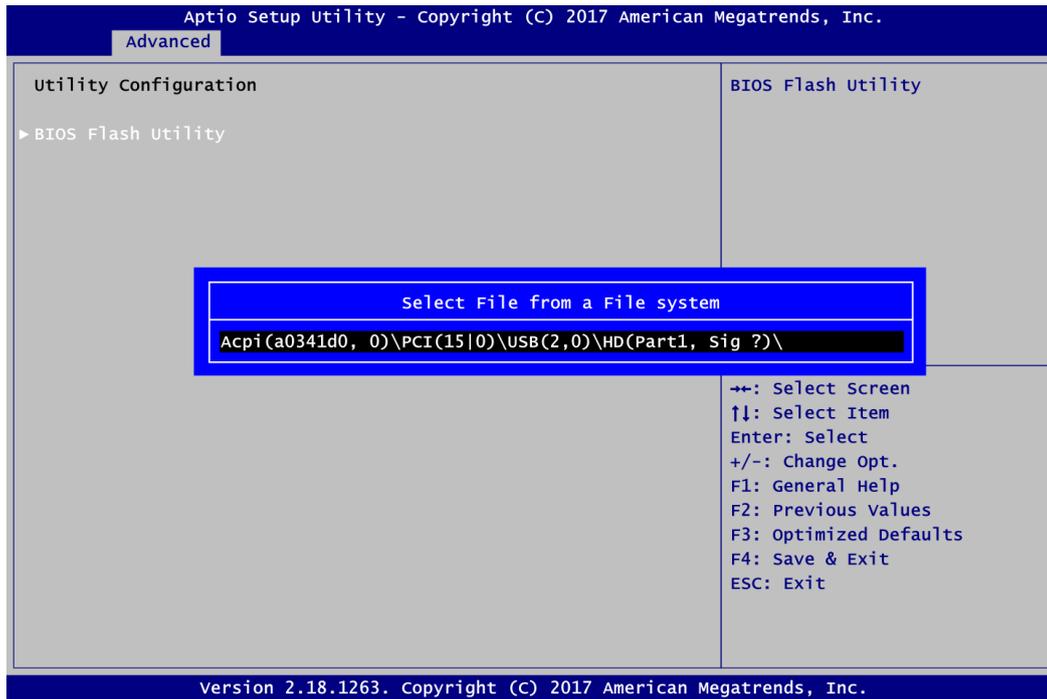


**BIOS Flash Utility**

BIOS flash utility configuration. For more detailed information, please refer to Appendix C.

- **Device Configuration**

A description of selected item appears on the right side of the screen. For items marked with "▶", please press <Enter> for more options.

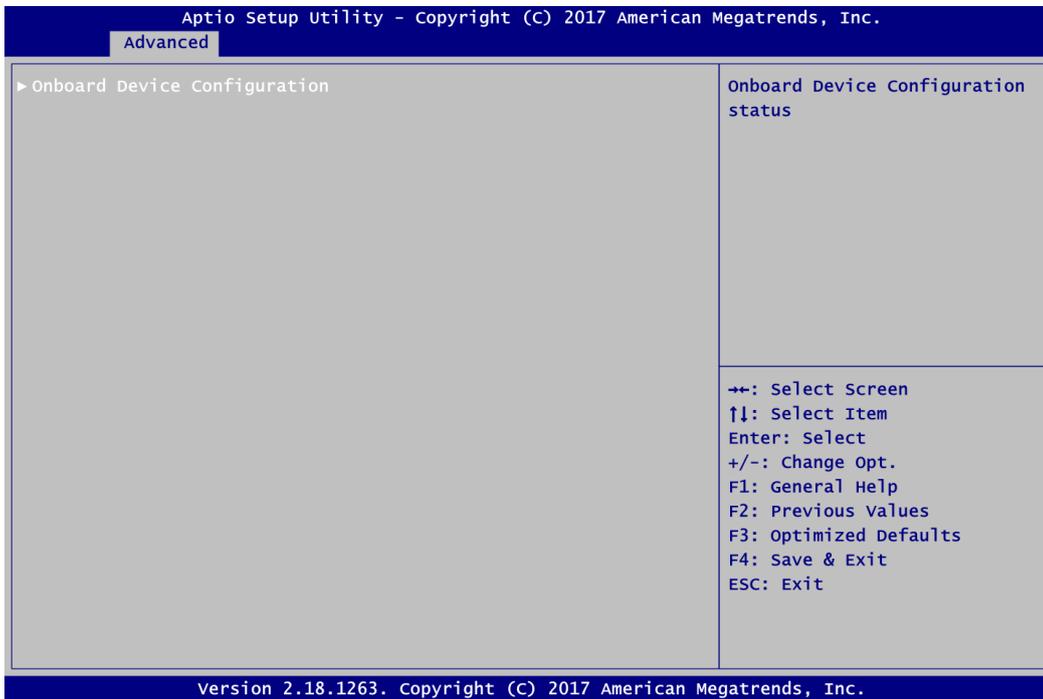


**Onboard Device Configuration**

Use this option to configure onboard device (e.g., DIO setting).


- **Onboard DIO Configuration**

You can use this screen to select options for the 8-bit Digital I/O Configuration. A description of the selected item appears on the right side of the screen. For items marked with "▶", please press <Enter> for more options.

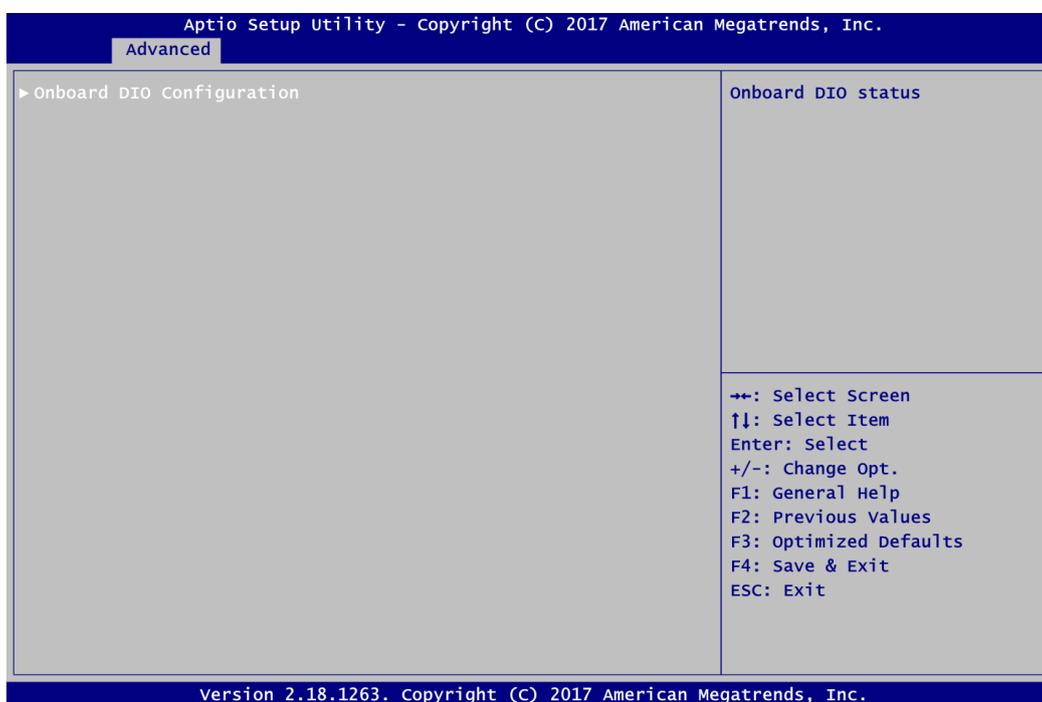


## Onboard DIO Configuration

Use this screen to set parameters related to digital I/O configuration.


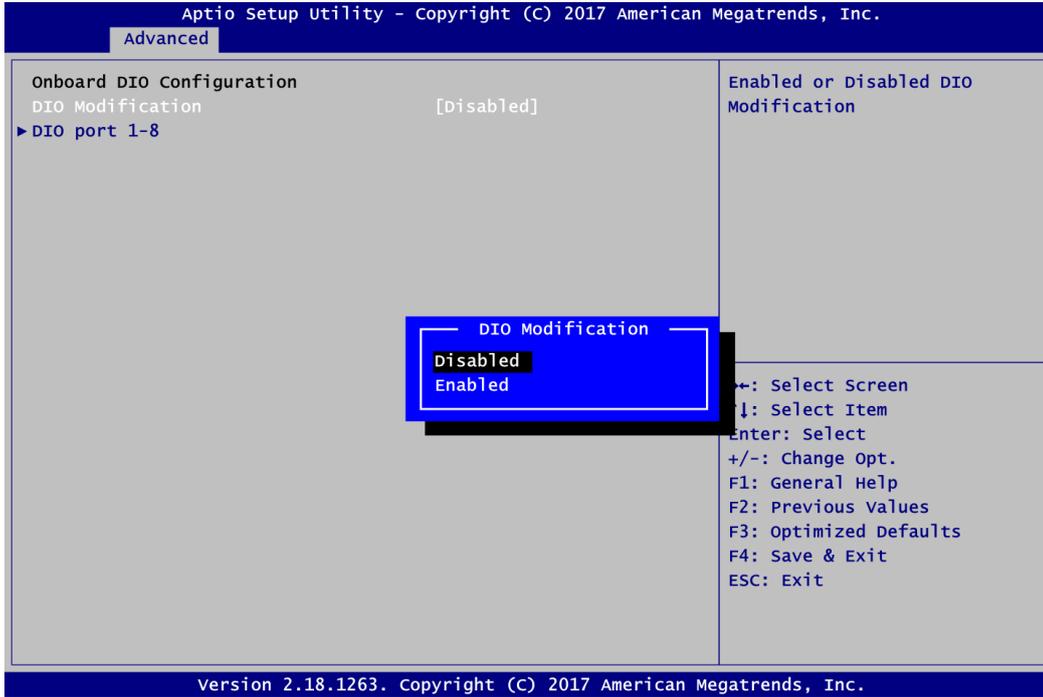


## DIO Modification

Enable or disable digital I/O modification. If modification is disabled, the DIO status sub screen is as follows:

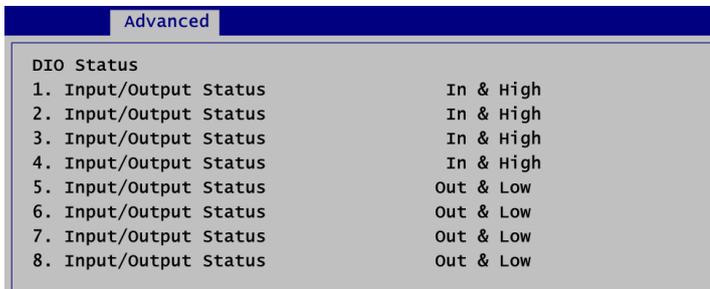

Once it is enabled, you can load manufacture default and access to the DIO status sub screen to set output or input, see image below.

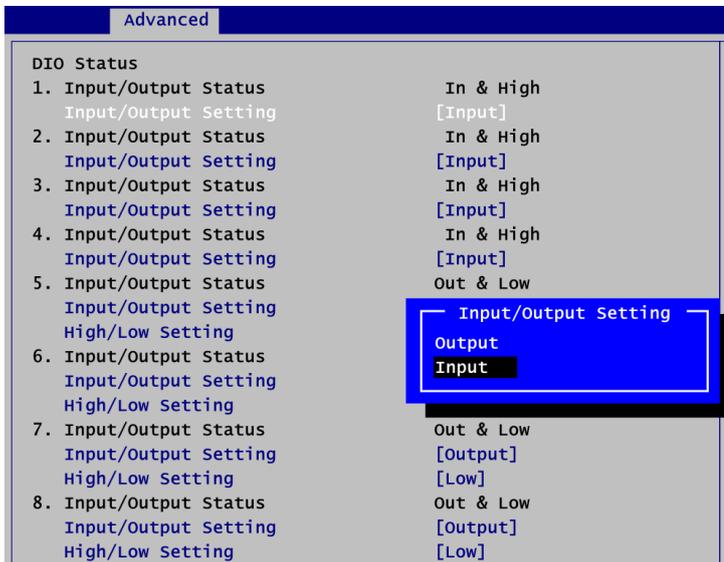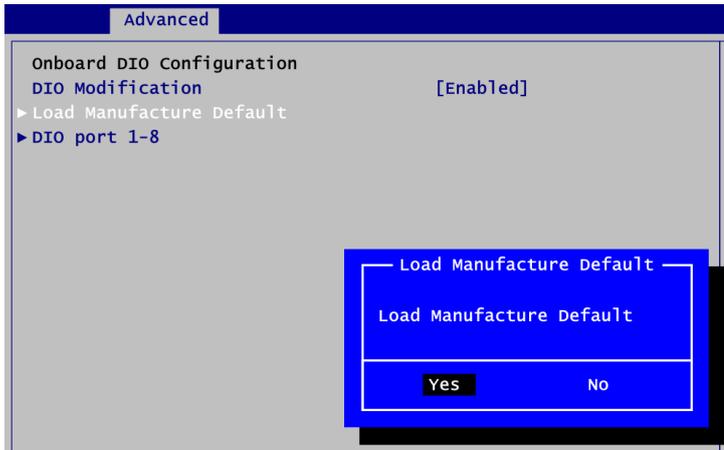


## 4.5 Chipset Menu

The Chipset menu allows users to change the advanced chipset settings. You can select any of the items in the left frame of the screen to go to the sub menus:

- ▶ North Bridge
- ▶ South Bridge

For items marked with “▶”, please press <Enter> for more options.

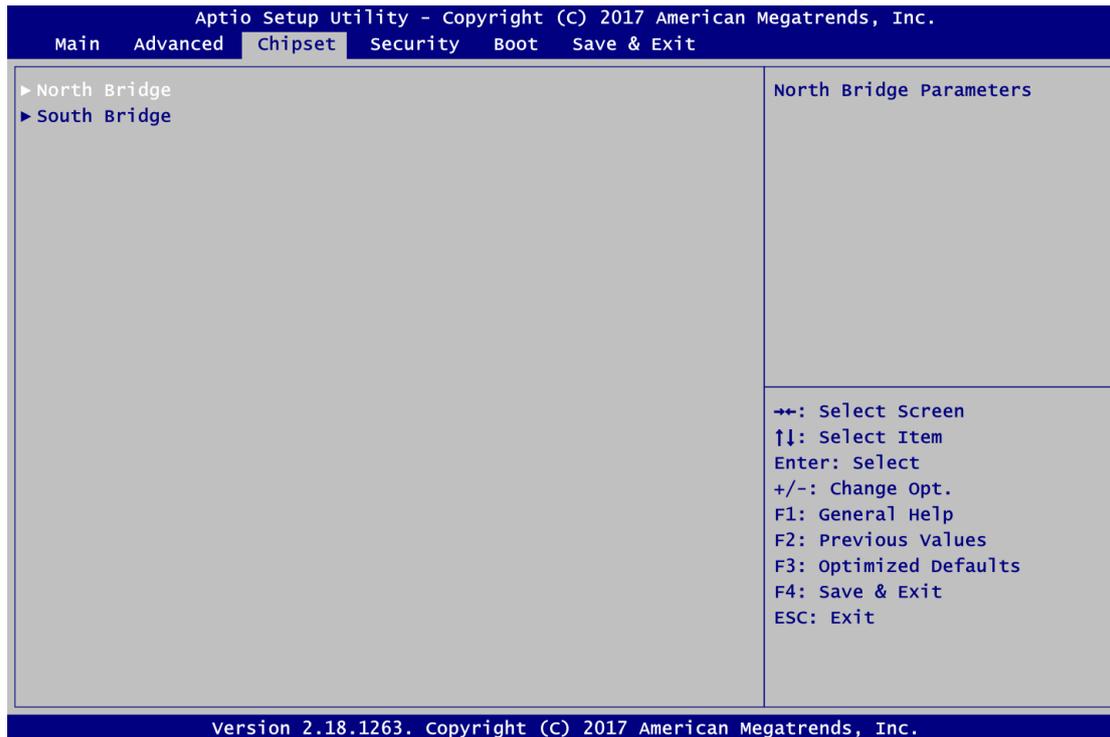

- **North Bridge**

This screen allows users to configure parameters of North Bridge chipset.




**LCD Control**

This item allows you to select LCD panel control options. Please press <Enter> to go to the sub menus.


**Memory Information**

Display system memory information.

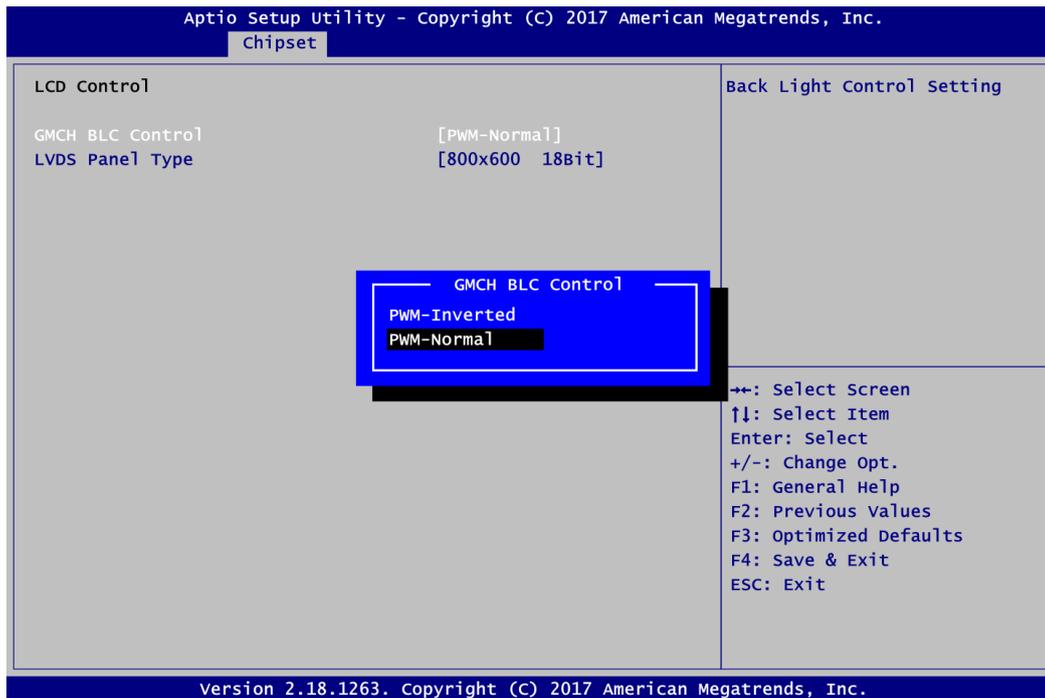

### GMCH BLC Control

Use this item for backlight control setting.

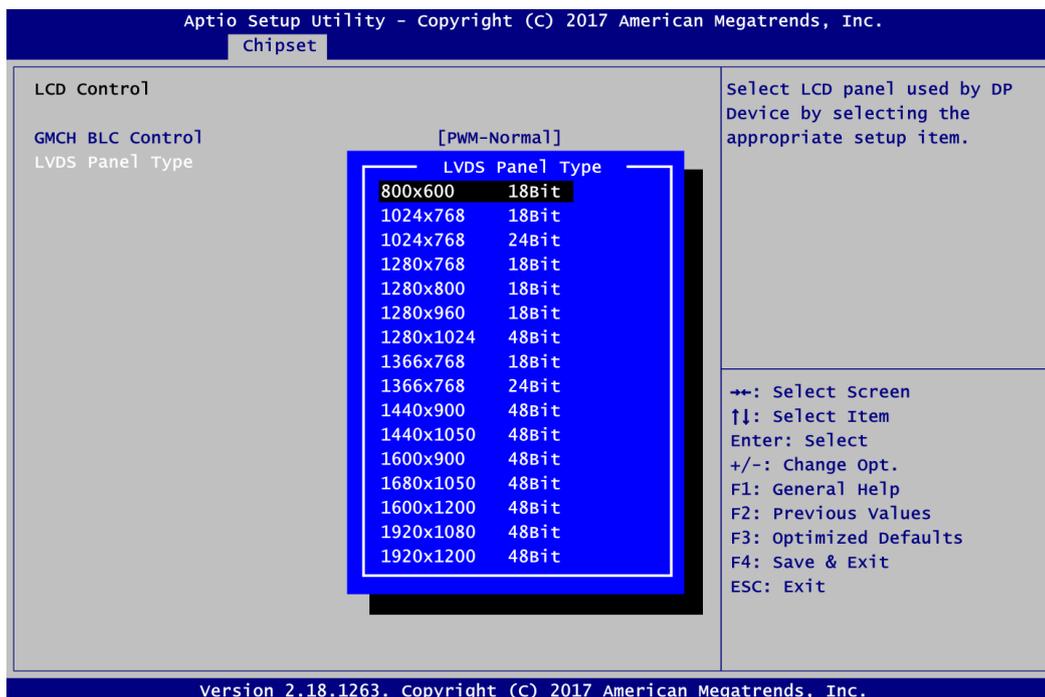


### LVDS Panel Type

Select LVDS panel resolution for the display device by selecting the appropriate setup item.

- **South Bridge**

This screen shows the information of South Bridge chipset.

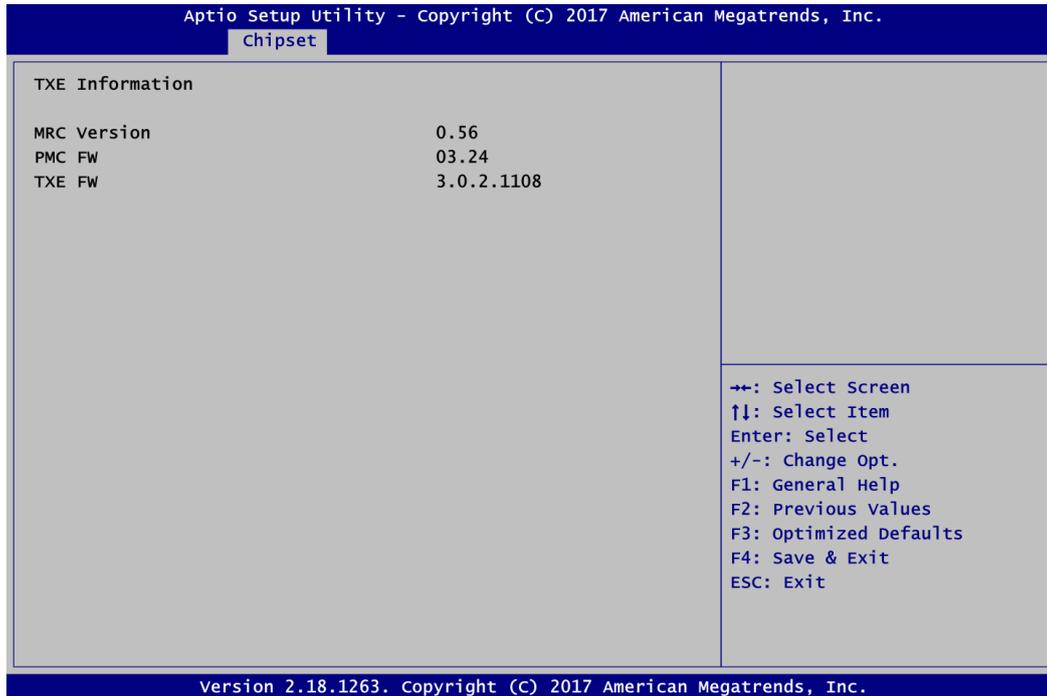

## 4.6 Security Menu


The Security menu allows users to change the security settings for the system.




- **Setup Administrator Password.**  
Set setup administrator password.
- **User Password**  
Set user password.

## 4.7 Boot Menu

The Boot menu allows users to change boot options of the system.

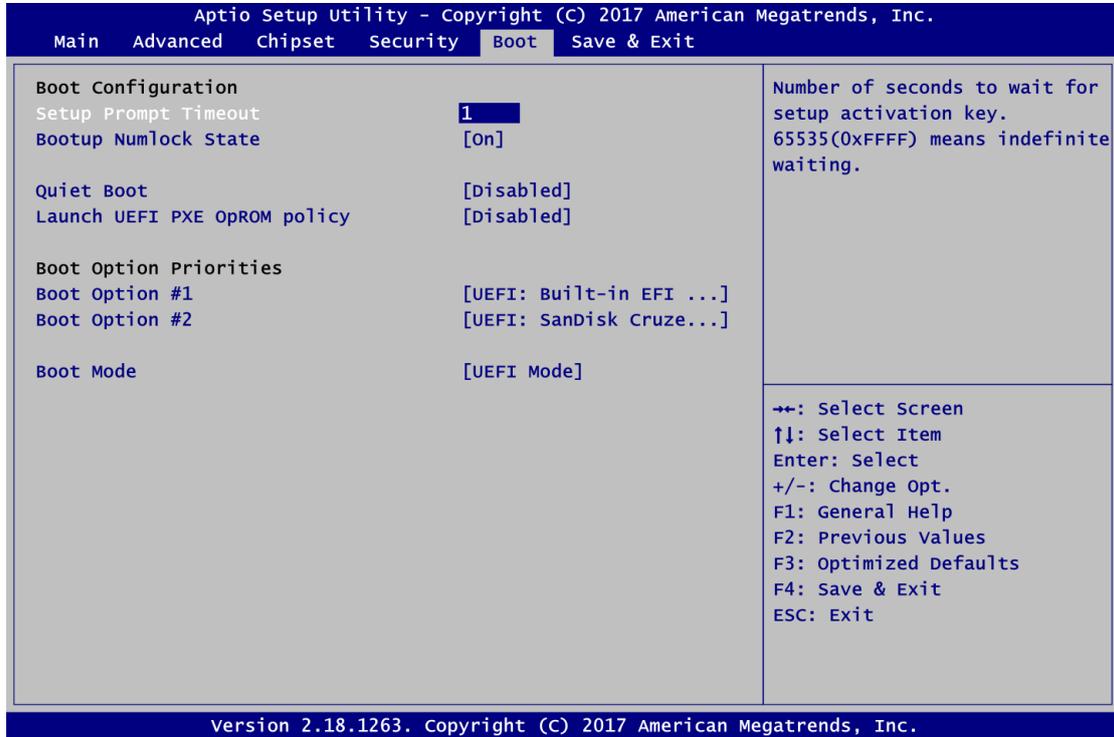


- Setup Prompt Timeout**  
 Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
- Bootup NumLock State**  
 Use this item to select the power-on state for the keyboard NumLock.

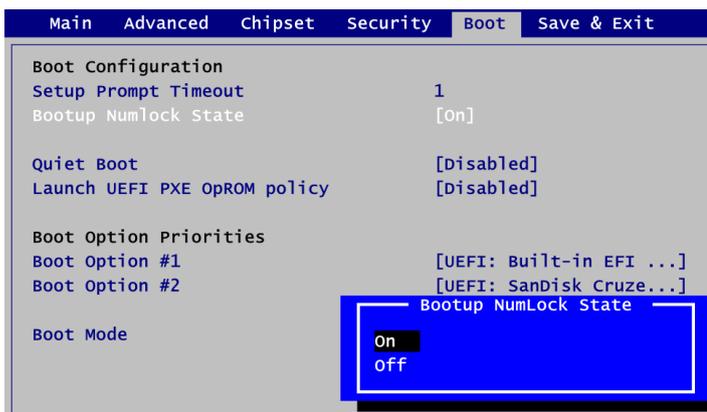


- **Quiet Boot**

Select to display either POST output messages or a splash screen during boot-up.

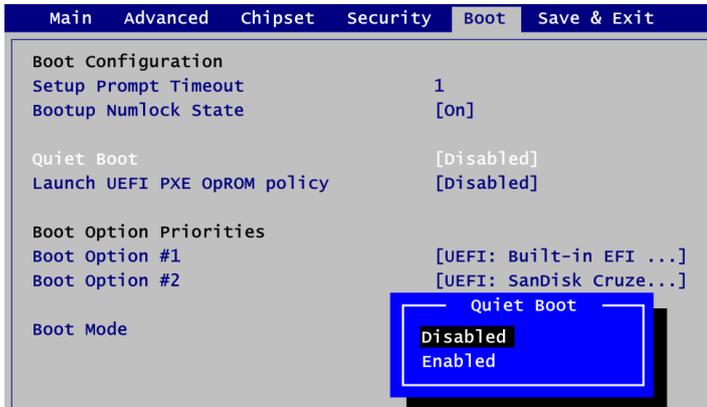


- **Launch UEFI PXE OpROM policy**

Control the execution of UEFI PXE OpROM.

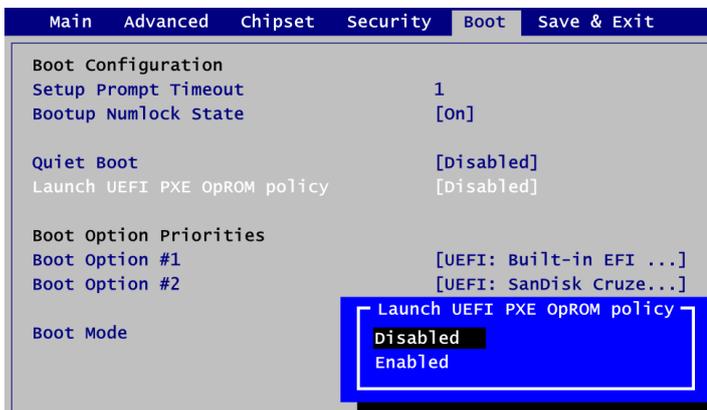

- **Boot Option Priorities**



These are settings for boot priority. Specify the boot device priority sequence from the available devices.

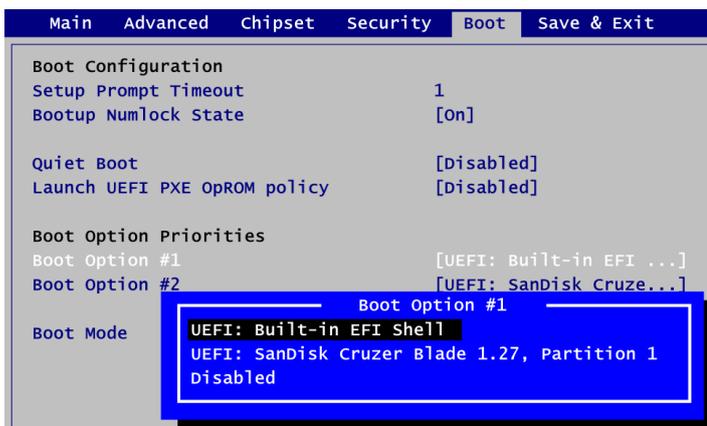


- **Boot Mode**

Use this item for boot mode settings.

- UEFI Boot: Select support to boot any UEFI-capable OS.
- Legacy Boot: Select support to boot non UEFI-capable OS that expects a legacy BIOS interface.

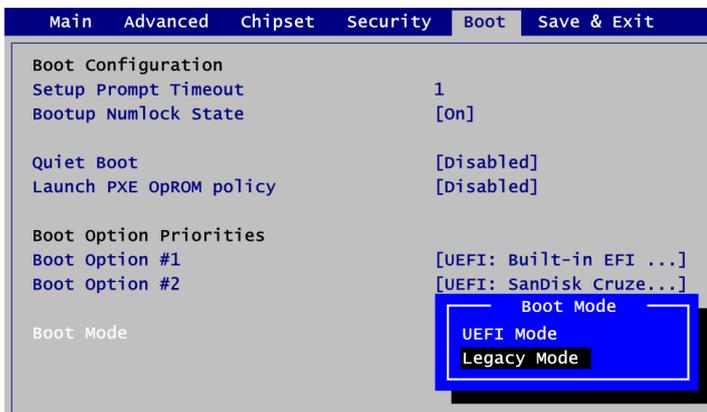
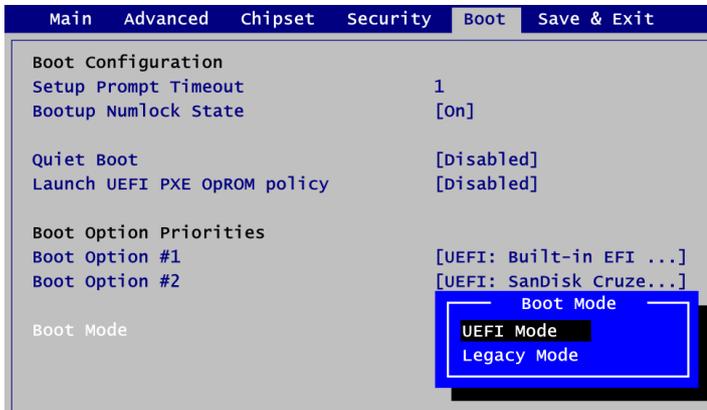


Note that the Primary IGFX Boot Display option appears only if Legacy Mode is selected, see image below.

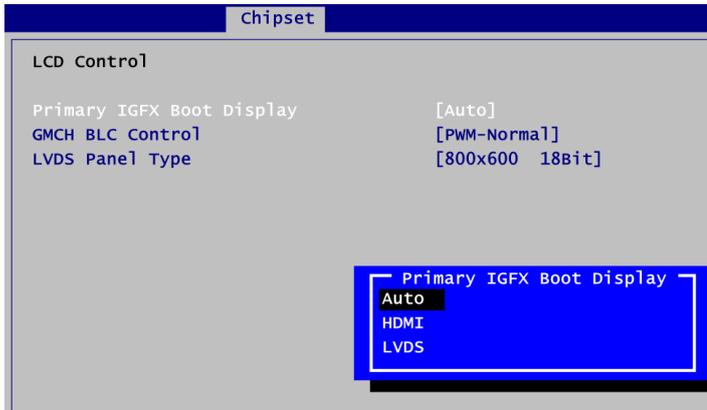


### Primary IGFX Boot Display

Select the video device which will be activated during POST (Power-On Self Test). The secondary boot display item appears based on your Primary IGFX Boot Display selection, see images below.

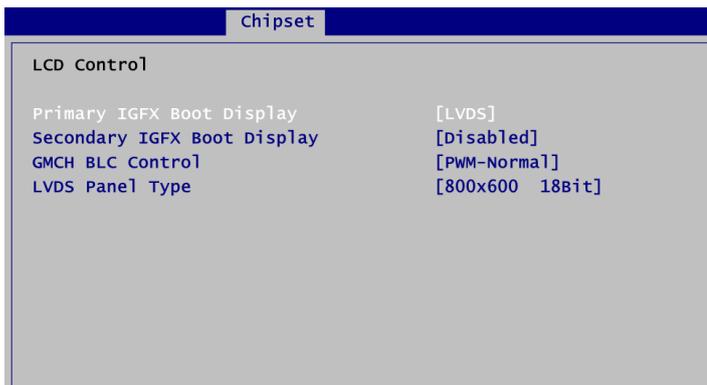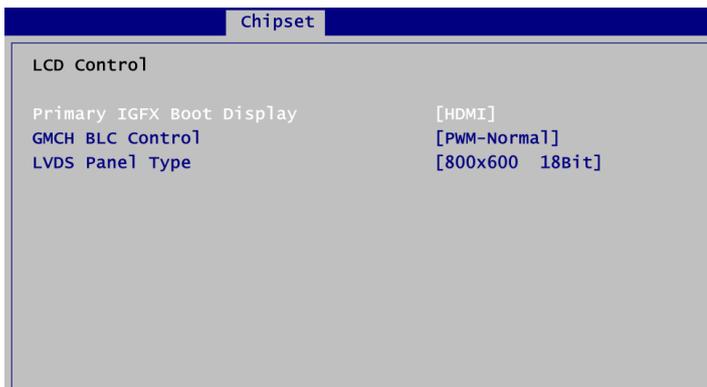


### Secondary IGFX Boot Display

Select secondary display device.

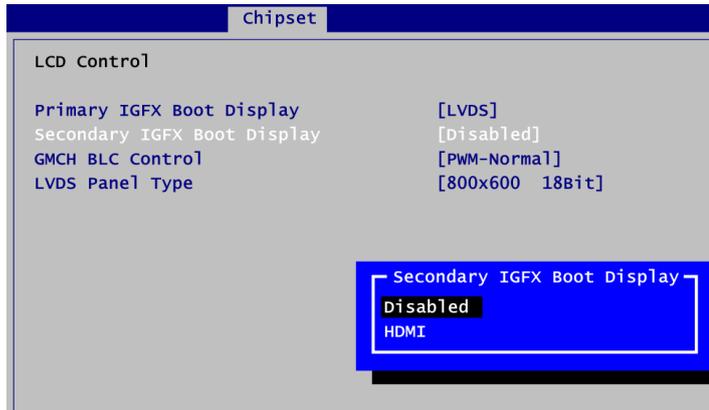

## 4.8 Save & Exit Menu

The Save & Exit menu allows users to load your system configuration with optimal or fail-safe default values.

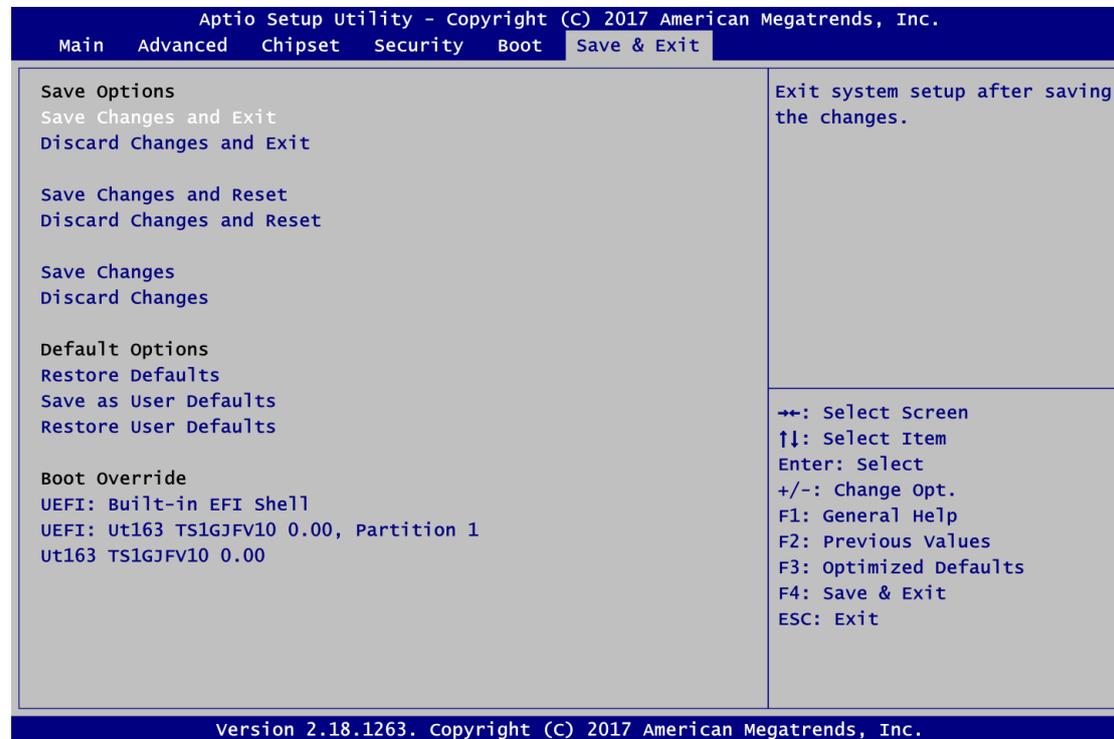

- Save Changes and Exit**  
 When you have completed the system configuration changes, select this option to leave Setup and return to Main Menu. Select Save Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to save changes and exit.
- Discard Changes and Exit**  
 Select this option to quit Setup without making any permanent changes to the system configuration and return to Main Menu. Select Discard Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to discard changes and exit.
- Save Changes and Reset**  
 When you have completed the system configuration changes, select this option to leave Setup and reboot the computer so the new system configuration parameters can take effect. Select Save Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to save changes and reset.
- Discard Changes and Reset**  
 Select this option to quit Setup without making any permanent changes to the system configuration and reboot the computer. Select Discard Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to discard changes and reset.
- Save Changes**  
 When you have completed the system configuration changes, select this option to save changes. Select Save Changes from the Save & Exit menu and press <Enter>. Select Yes to save changes.

- **Discard Changes**  
Select this option to quit Setup without making any permanent changes to the system configuration. Select Discard Changes from the Save & Exit menu and press <Enter>. Select Yes to discard changes.
- **Restore Defaults**  
It automatically sets all Setup options to a complete set of default settings when you select this option. Select Restore Defaults from the Save & Exit menu and press <Enter>.
- **Save as User Defaults**  
Select this option to save system configuration changes done so far as User Defaults. Select Save as User Defaults from the Save & Exit menu and press <Enter>.
- **Restore User Defaults**  
It automatically sets all Setup options to a complete set of User Defaults when you select this option. Select Restore User Defaults from the Save & Exit menu and press <Enter>.
- **Boot Override**  
Select a drive to immediately boot that device regardless of the current boot order.

# Appendix A

## Watchdog Timer

### A.1 About Watchdog Timer

After the system stops working for a while, it can be auto-reset by the watchdog timer. The integrated watchdog timer can be set up in the system reset mode by program.

### A.2 How to Use Watchdog Timer

Assembly sample code :

```
mov     dx,fa10           ; 5 seconds (Maximum is 65535 seconds; fill in
                        ; 0xFA10 and 0xFA11 register, ex: 0xFA11=0x01,
                        ; 0xFA10=0x68 means 360 seconds)

mov     al,05
out     dx,al

mov     dx,fa12           ; Enable WDT
mov     al,01
out     dx,al
```


**This page is intentionally left blank.**

# Appendix B

## Digital I/O

### B.1 About Digital I/O

The onboard GPIO or digital I/O has 8 bits (DIO1~8). Each bit can be set to function as input or output by software programming. In default, all pins are pulled high with +5V level (according to main power). The BIOS default settings are 4 inputs and 4 outputs.

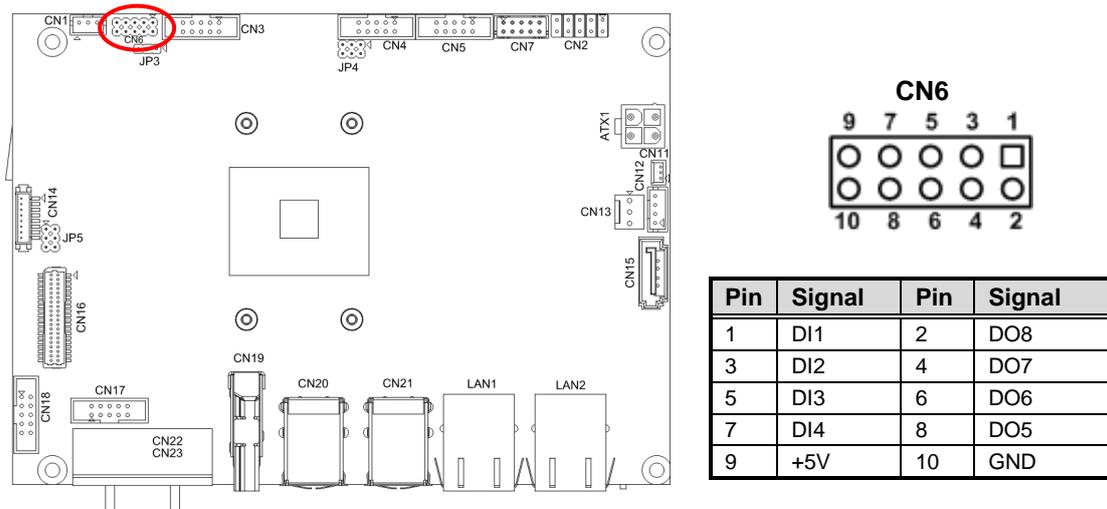

### B.2 Digital I/O Programming

Assembly sample code :

```

mov    dx,fa18          ; Set DIO 0-7 to Output
mov    al,00
out    dx,al

mov    dx,fa19          ; Set DIO 4-7 to High
mov    al,f0
out    dx,al

mov    dx,fa18          ; Set DIO 0-7 to Input
mov    al,ff
out    dx,al

mov    dx,fa19          ; Get DIO 0-7 status
in     al,dx

mov    dx,fa18          ; Set DIO 0-4 to Input, 5-7 to Output
mov    al,1f            ; al = 1F => 00011111
out    dx,al

mov    dx,fa19          ; Set DIO 6 to High
mov    al,40            ; al = 40 => 01000000
out    dx,al

in     al,dx            ; Get DIO 0-7 status

```

**This page is intentionally left blank.**